

# SET UP INSTRUCTION FOR 2653F1

1) Prepare a suitable location for your new fountain. Always follow local electrical codes. Connect to a safe GFCI circuit. Set the 2653F1 on your location and make sure it sits level.

2) From the front, place the light in the bottom pool. Do this by first inserting the light cord through the hole near the floor of the fountain which connects the front pool to the back reservoir (see drawing of back reservoir). Pull excess light cord out the back of the fountain. Set the light as close to the front of the fountain as possible for the best effect. (If the light has a barbed fitting inserted underneath, remove that fitting so the light can sit flat on the fountain floor. Some caulk/putty is included to help you affix the light to the floor of the fountain.)



3) The rest of installation will be from the back. Connect the clear tube to the middle leg of the tee. Then connect the two no-kink tubes to the other legs of the tee. Place the flow restrictor over one of the no-kink tubes just tight enough to hold it in place. (You can further tighten the restrictor later if you want to balance the water flow.)

4) Press the open ends of the no-kink tubes up over the two barbed adapters which you will find already installed in the back of the fountain. You will want to attach the tube with the flow restrictor to the adapter on the right side (of the back).

5) Thread the 1/2" male x 3/4" barb adapter into the top of the pump. Place the pump in the reservoir at the bottom of the back of the fountain. Push the clear tube onto the pump adapter.

6) Read your pump and light instructions. Fill your fountain with water. Plug in the transformer and pump to enjoy your fountain. (If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug back in a few times and it should start.)

7) Save this instruction and make sure to winterize according to details below.

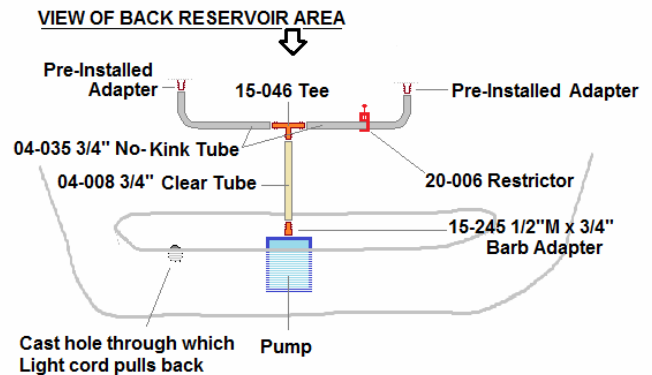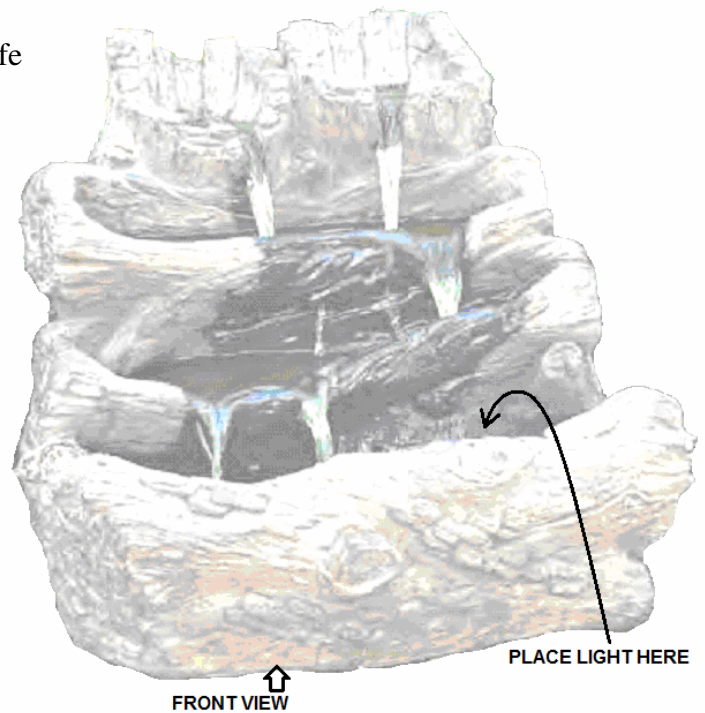

## **IMPORTANT – WINTER CARE**

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.

## **Online Resources**

Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
Contact : [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)