


SET UP INSTRUCTION FOR 3002F2

- 1) Prepare a suitable location for your new fountain. The fountain needs the support of a firm and level surface.
- 2) Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.
- 3) Place the 3002B fountain's basin unit(s) in its finished location.
- 4) Set the fountain top piece on its side. Connect the AB870 light and the 3/4"NKT No-Kink Tubing
- 5) Feed the cord of the AB870 first into the 30002A Buddha's cup. Pull the cord all the way through, including the 3/4"NKT No-Kink tubing - and allow the light to nest into the Buddha's cup. Connect the barbed adapter connector to this tubing.
- 6) Place the pump in the center-back portion of the basin. Connect the small pipe adapter onto the pump's exhaust, connect the 1/2"NKT No-Kink tubing to it.
- 7) Slip on the R1 Restrictor (this will regulate the amount of water flow later),
- 8) Place 3002A Buddha on top of 3002B basin, reach under Buddha and connect the smaller end of the barbed adapter connector to the No-Kink tubing attached to the pump.
- 9) Feed AB870 light cord through the back, following the pump's cord, and connect to the transformer.
- 10) Fill the bowl unit with water to about 1" from the top.
- 13) Read your pump and light instructions. Then, connect the light power cord to the transformer provided and plug in the transformer and pump to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.
- 14) After starting your fountain, you may adjust the amount of water action by adjusting the R1 Restrictor, twisting the adjusting thread pin clockwise (less action) or counterclockwise (more action).
- 15) Save this instruction and make sure to winterize according to details below.

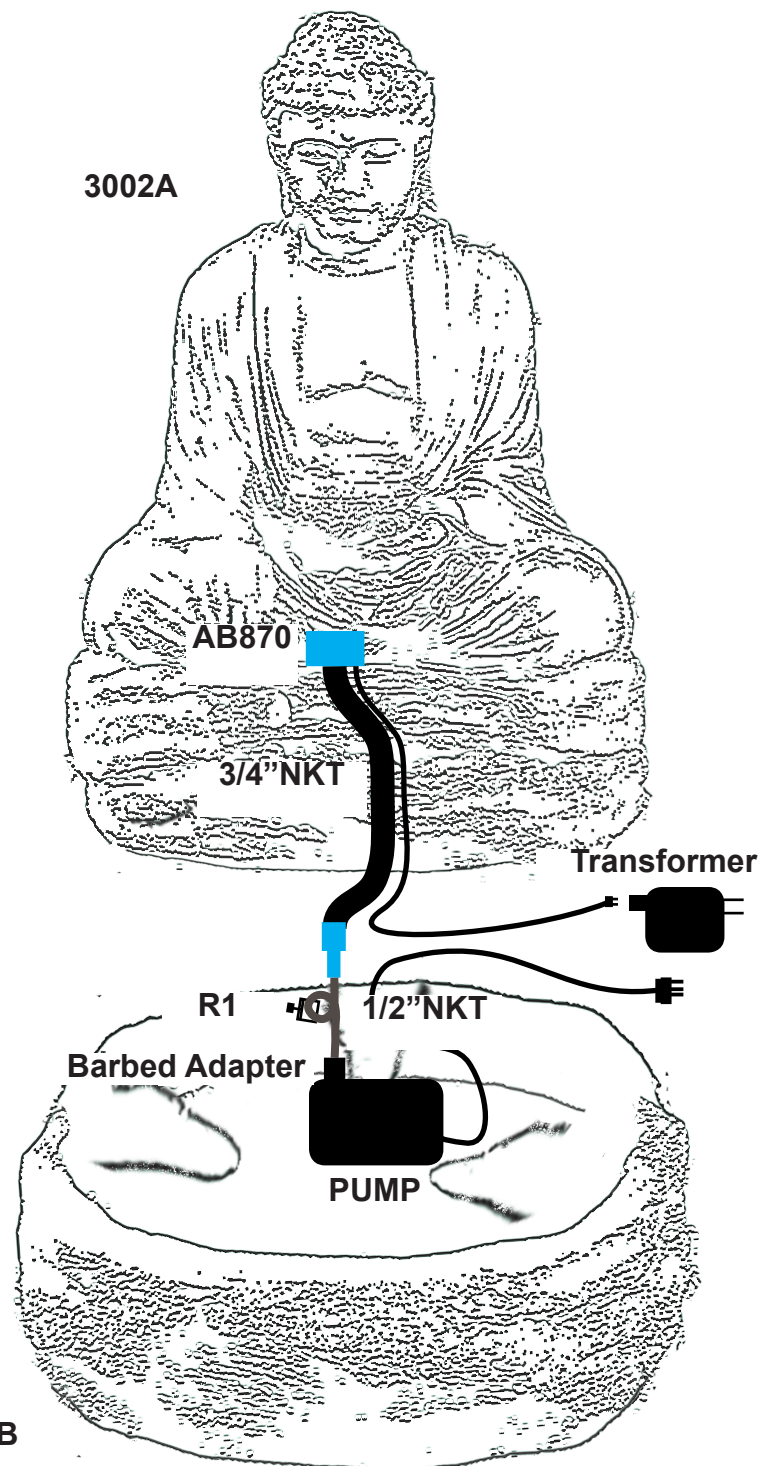

IMPORTANT - WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.