


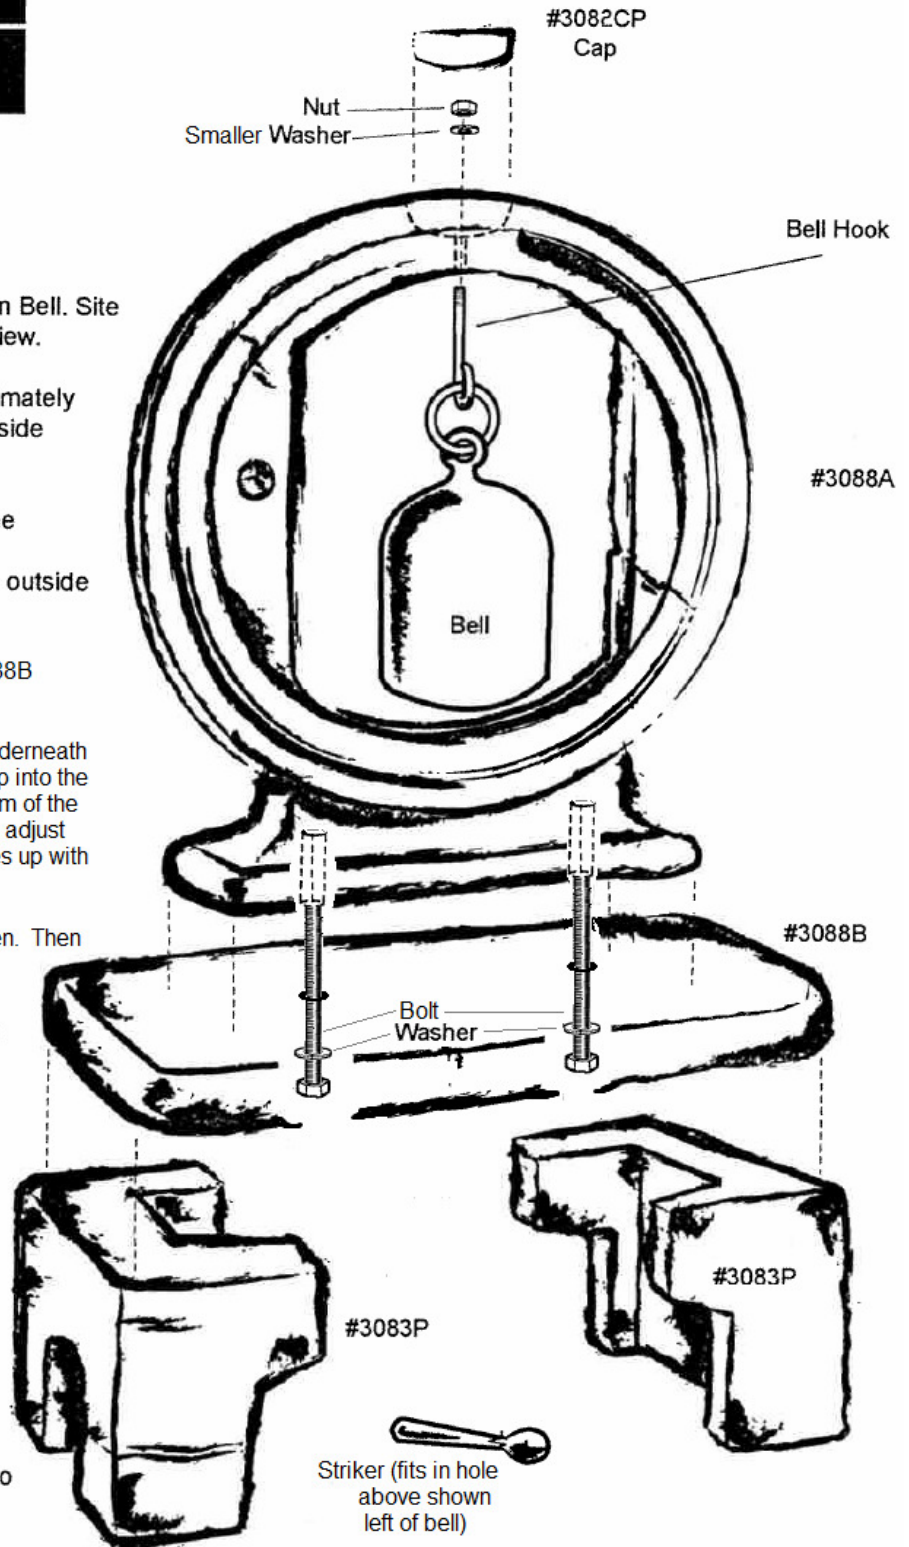

Circle Garden Bell 3088

Assembly Instructions

1. Locate a suitable site for your Garden Bell. Site should be level and provide a pleasing view.
2. Locate two 3088P Pedestals approximately 29 inches apart. (measured from the outside edge of each pedestal)
3. Locate the 3088B Bottom Plate on the pedestals. **NOTE:** the Pedestals should protrude approximately 1/2 inch from the outside edge of 3088B Bottom Plate.
4. Locate the 3088A Top Circle onto the 3088B Bottom Plate.
5. Insert a bolt and washer as shown from underneath the Bottom Plate the threading it all the way up into the threaded coupling which is cast into the bottom of the Top Circle. You may need an extra person to adjust the position of the Top Circle until the bolt lines up with the threaded coupling.
6. Tighten the bolt snug, but do not overtighten. Then repeat with the second bolt and washer.
7. Insert the Bell Hook through the hole in the Top Circle (from the bottom) and secure with a flat washer and 1/2" nut. Thread nut onto hook as far as possible, yet leaving room for the cap.
8. Hang Bell on Bell Hook. Tighten Bell Hook nut as required. Place Cap over Bell Hook.
9. Place Bell Striker in striker well, which is located on the left side of the top circle 3088A.
10. Enjoy your Bell and, call the family to dinner.



4/2019

IMPORTANT-WINTER CARE:

Do not allow water to collect and freeze in Garden Bell base. Freezing and thawing may damage the finish of your Garden Bell. Cover the Garden Bell or the base with a suitable cover that will prevent water from collecting in the base. By following these simple and sensible precautions during the winter season, you will protect your Garden Bell for years of beauty and enjoyment!

Online Resources

Products: www.henristudio.com/products
 FAQs: www.henristudio.com/faq
 Warranty: www.henristudio.com/warranty
 Contact : www.henristudio.com/contact-us