
Pacifico Fountain (4014F2)

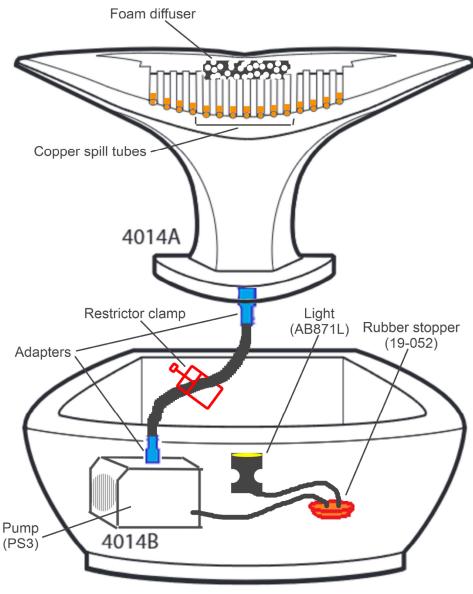

- 1) Place pump and light units into the basin, and run their respective power cables through the hole in the bottom of the 4014B basin, bringing the cables out and underneath the fountain.
- 2) Screw the included barbed adapters into both the top of the pump, and the bottom side of the 4014A (top piece). Press the included tubing over the adapter on the pump. Slide the restrictor clamp over the tubing, then press the open end of onto the adapter connected to the 4014A. This restrictor can be adjusted to control flow rate.
- 3) Install the copper spill tubes onto the spill groves of the 4014A. Each groove receives a piece of copper. The copper tubes should overhang from the edge of the concrete by roughly 1/4". To install the copper, lay a small bead of silicone onto the end of a given spill groove, and press the copper tube into place onto the silicone. BE CERTAIN to wipe away access silicone that gets squeezed out of the groove when you press the copper into place. That excess silicone will impact water flow through the spill. When all spills are complete with copper installed, press the foam diffuser into place, it should be covering the hole from which water will flow. 4) In the basin, peel the rubber stopper open and wrap it around the pump and light cables passing through the hole in the basin. Each cable has a respective channel in the stopper for their respective sizes. Ensure each cable is seated well within its channel, straight up and down with no gaps in the stopper. Press the stopper into place within the hole, so that no more than 1/4" of the stopper is left protruding above the concrete.

Questions? Email ProductSupport@HenriStudio.com

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

IMPORTANT - WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.