

# SETTING UP THE 4021F2

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Set the 4021B Basin down on your prepared site and check to make sure it is level.

2) Place the pump and light inside the front wall of the basin. Run both power cords around to the left (as shown) and out the hole in the basin's back wall, toward your power supply. Just inside the basin, near the hole, open the slits in the rubber stopper and place each power cord in the appropriate pre-molded groove (pump cord goes in the larger opening), then close the slits. Press the stopper into the hole in the back wall. The widest end of the stopper should be inside the basin and should protrude about 1/8" from the wall. That will help if you need to remove it in the future.

3) With assistance, gently set the 4021A Moon Dance Top into the basin. Notice that the basin floor has sculpted knobs which the top piece fits behind.


4) Thread the supplied barbed adapters into the top of the pump and into the lower left side of the fountain top. Push the water tube over the barb of the pump adapter and then over the barb of the fountain barbed adapter.

5) Check the fit of the copper spill plate at the front of the spill area (see drawing). You will want to mount the plate so it overhangs the spill area by 1/8" to 1/4". Remove the plate, line the spill with the supplied silicone sealant, then set the copper plate back in the spill area. It is best if the fit of the copper or presence of the silicone sealant prevents any water from leaking through the sides, between the copper and stone surface. Allow the silicone sealant at least 30 minutes to dry before running water over it.

6) Center the light in front of the basin, pointing it up toward the copper spill plate.

7) Push the copper fan nozzle (upper right side of moon as shown) into place over the cast-in plastic fitting. Angle it so its opening is more vertical than sideways.

8) Fill basin and top with water. Read pump instructions. Turn on the pump. If it does not begin working immediately, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

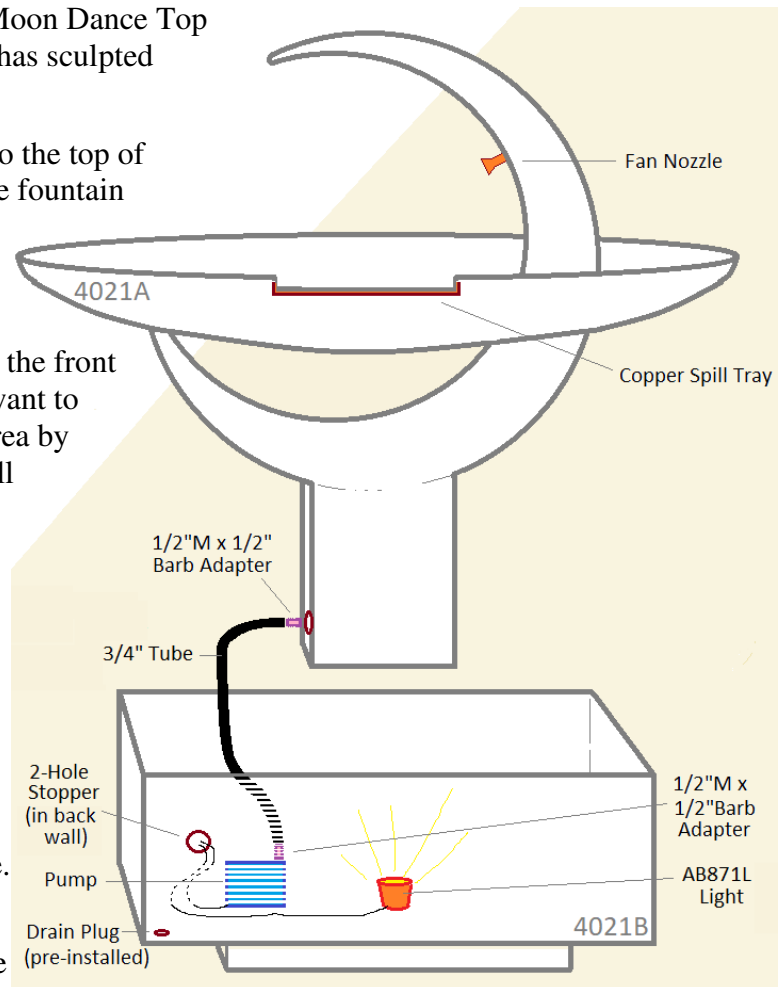

Csd 10/2020

## Online Resources

Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
Contact: [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

## IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.