

# SETTING UP THE 4036F

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

1) Prepare a suitable location for your new fountain. Place the 7036 Pedestal in the center of your site with the cord exit hole facing the back. Check to make sure the pedestal is level.

2) Set the 6036 Basin on the pedestal. Check for level again. Place the pump in the basin and push its power cord down through the basin's center hole.

3) Place the AB874L light set in the basin and feed its power cord down through the basin's center hole. With help, tip the basin and pedestal back just enough to pull both power cords out from underneath and out the back notch - then toward your power source.

4) Back inside the basin, open the slit in the rubber Stopper and place around the power cords. The light cord fits in the stopper's smaller groove and the pump cord in the larger groove. Close the stopper around the cords and press the stopper into the basin hole to make the basin water tight. It is good to leave about 1/8" of stopper above the basin floor level. This will help you pull the stopper out in the future.


5) Spread out the four lights, locating one near the center of each basin wall as shown. Thread the Barbed Adapter into the top of the pump. Push the water Tube onto the barbed adapter and Clamp it in place.

6) Set the 4036 Column on the basin, pushing the water tube up through the center as you lower it into place.

7) Slip the remaining clamp over the top end of the water tube, push the water tube onto the LD4036 Spray Bar, and tighten the clamp in place as shown. Set and center the LD4036 spray bar on top of the column.

8) Cover the column and spray bar with the 4036T Top.

9) Read your pump and light instructions. Fill the bottom bowl with water. Then plug in the pump and connect to the light transformer to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

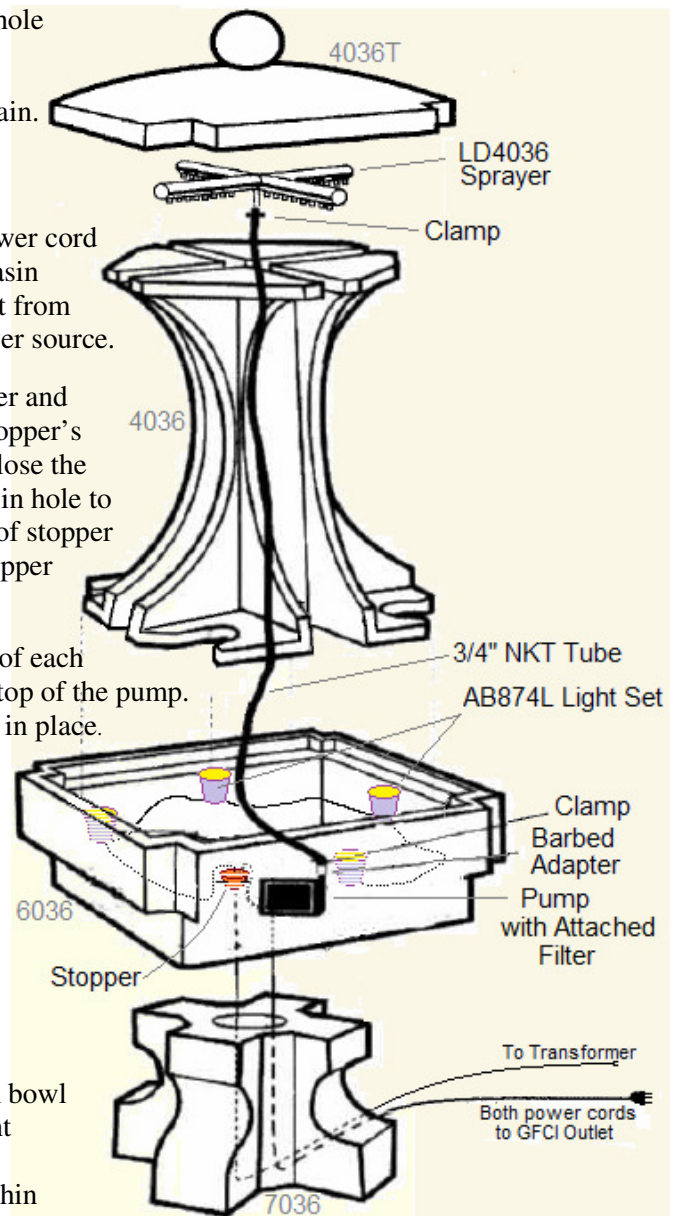

csd 4/2019

## Online Resources

Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
Contact: [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

## IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.