


The Great Wave 4044F1

1. Place the pump and light assembly (connected as in the diagram) into the basin. Run the power cables out through the hole in the bottom of the fountain, and insert the rubber stopper. The cables will be inserted into their respective channels within the stopper. 2. Screw the included adapters into both the top of the pump and to the vertical concrete wall of the fountain. Connect one end of tubing to the pump, slide the included restrictor over the tubing, then connect the other end of the tubing to the concrete-side adapter.
2. Screw the included adapters into both the top of the pump and to the vertical concrete wall of the fountain. Connect one end of tubing to the pump, slide the included restrictor over the tubing, then connect the other end of the tubing to the concrete-side adapter.

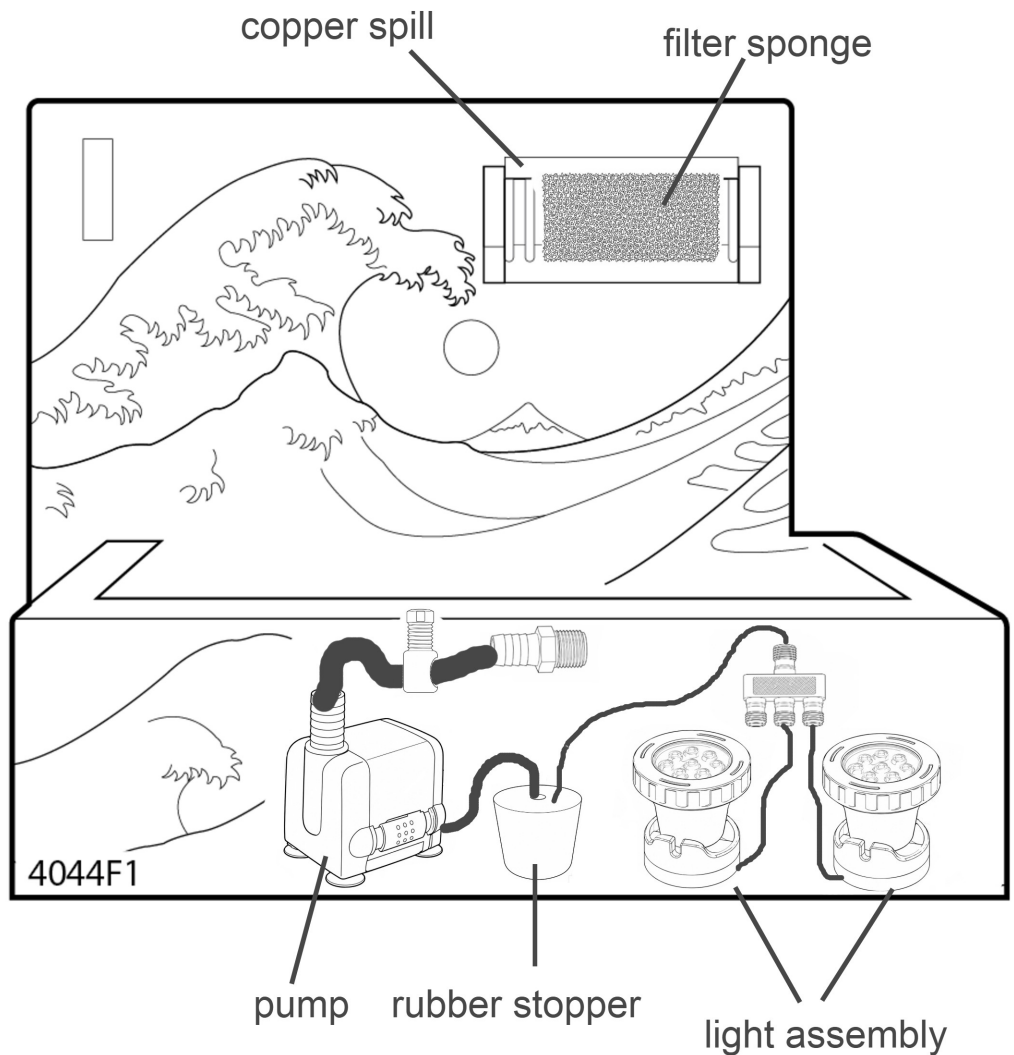

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

Questions? Email
ProductSupport@HenriStudio.com

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.