

Setting up a 4125F

1) Prepare a suitable location for your fountain. Place the 6125 Basin on your prepared site. Check to make sure it is sitting level.

2) Set the 4125E Corner Spill piece on top of the 6125 Basin. Place the pump in the back corner of the Basin. Thread the Barb Adapter into the top of the pump. Slip one end of the tube over the adapter barb. Run the tube and power cord out the opening between the Basin and the 4125E Corner Spill as shown.

3) Set the 4125D Gable Spill on the 4125E Corner Spill. Place the LD4125 Water Flow (copper) Pipe into the designed resting points inside the top of the 4125D Gable Spill. Connect the open end of the water tube to the LD4125 and secure with the clamp.


4) With the 4125B Crown Top upside-down, install the AB871L light and brackets using the screw holes provided within the 4125B Crown Top. (Before fully tightening the screws, place the light itself between the brackets and then tighten to secure.)

5) Lift the 4125B into place atop the fountain.

6) Fill the Basin with water to about one inch from the top. Place the 6125AD concrete access door in the Basin as shown to hide the pump.

7) Read pump and light instructions. Turn on the pump and light. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start. Csd 4/2024

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

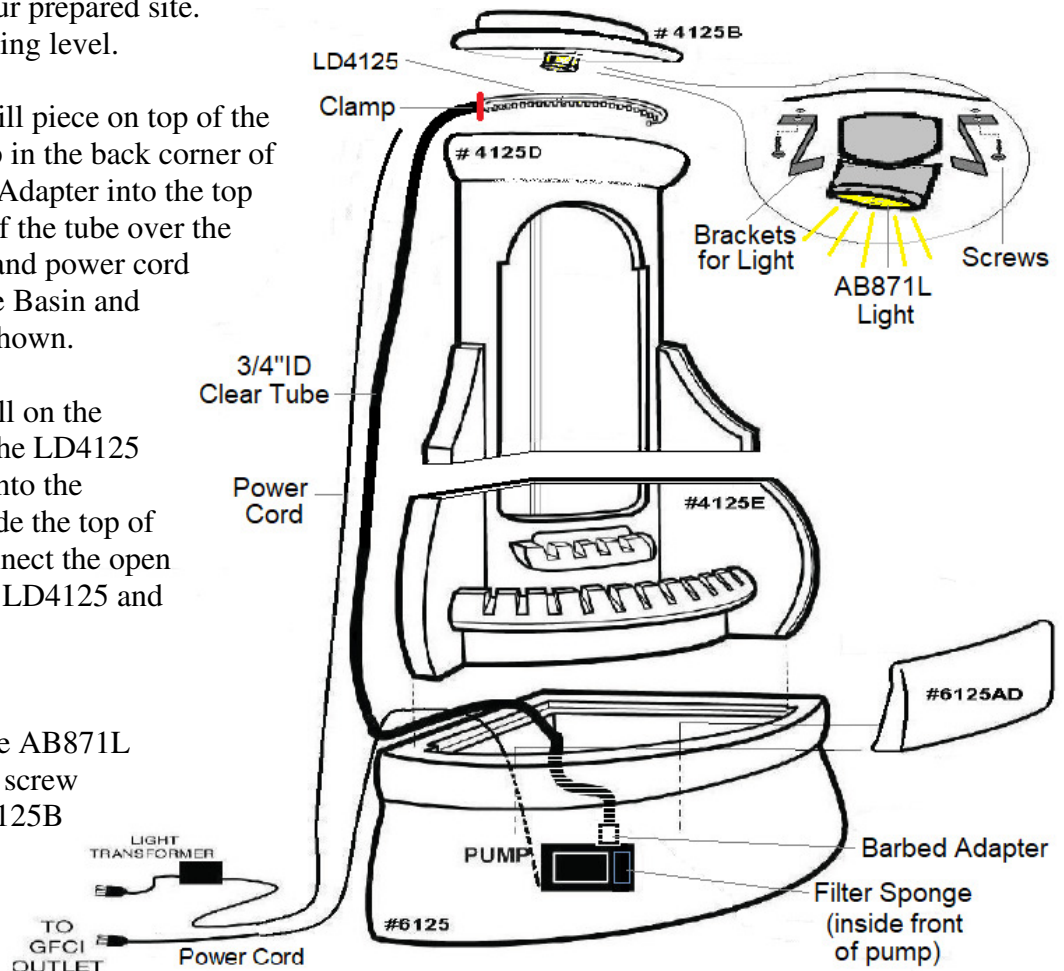

Online Resources
Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.