


SETTING UP THE 4270F2

- 1) Prepare a suitable location for your new fountain.
- 2) Set the 6270 Basin onto your prepared setting. The notch in back should lead toward your power source and the basin front should face your preferred viewing direction.
- 3) Set the Pump in the basin and drape its cord out the back, through the notch and toward your power source.
- 4) Slip the Exhaust Fitting into the top of the pump. Push the Water Tube onto the exhaust fitting, and position the Flow Restrictor on the middle of the tube – then tighten to hold the restrictor in place. (You will be able to turn the restrictor tighter once the fountain is running if you want the water flow to be reduced.)
- 5) Lower the 4270 Girl Statue over the basin and push the water tube onto the inlet underneath the girl. Then set her gently on the basin.
- 6) Read your pump instructions. Fill the bowl with water. Then plug in the pump to enjoy your fountain. If the pump does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start.

csd 10/2019

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

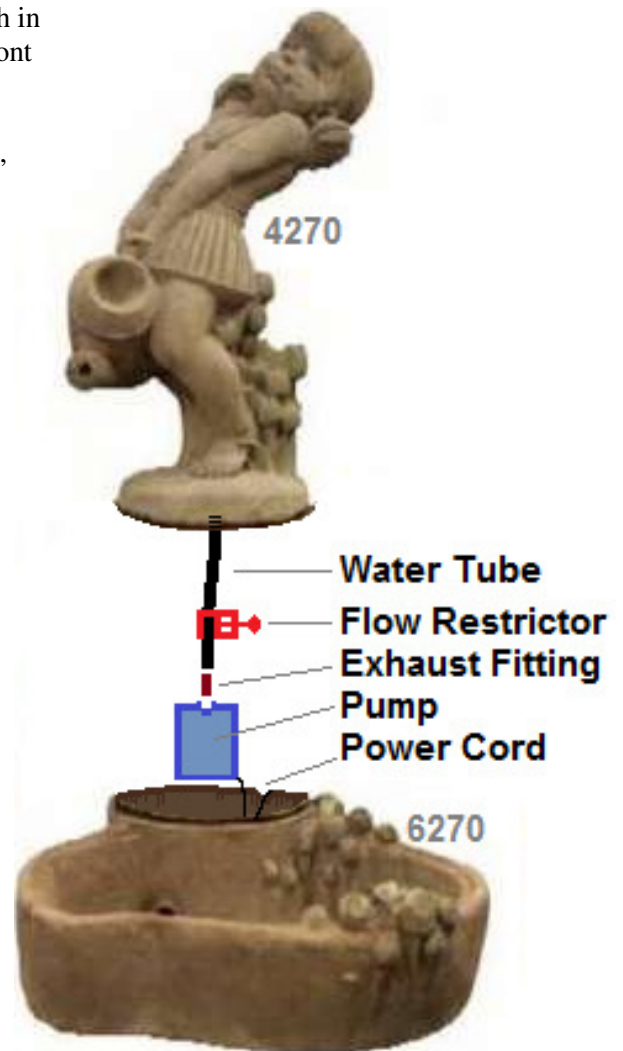

Online Resources
Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.