## SETTING UP THE 4302F3 & 4303F3

1) Prepare a suitable location for your new fountain with a firm and level surface.

- 2) It may be easiest to connect the fountain parts while the fountain's stone components are lying on their side.
- 3) Place the Basin unit near its finished location. Be sure to turn the power cord notch at the bottom toward your electrical connection. The 4302A or 4303A Collar should be near the base opening and the 4302N or 4303N Ball Top should be on the other side of the Collar.
- 4) Securely slip one end of the wider tubing over the barbed attachment under the AB870 light. Slip the tube and the power cord down through the top stone piece. Twist the threaded end of the 15-045 barbed adapter into the other end of the tube. Then push one end of the smaller tube over the barbed end of the adapter. Insert this tube assembly and light power cord together down through the top hole of the fountain top. The AB870 light should fit snug in the gray ring in the center hole at the Top.
- 5) Place the restrictor above the tube adapter, tightening just enough to hold it in place there. (*Once operating the fountain, you can tighten the restrictor to lessen your water flow if desired.*)
- 6) Set the pump in the basin and push the small pump exhaust fitting into the top of the pump. Place the rubber stopper on the pump cord about 10" from the pump body. The larger end of the stopper should be closest to the pump. Then, insert the power cord from the light into the stopper's other hole.
- 7) Guide the two power cords down through the center hole. Pull them out the bottom near the provided notch. From inside the base, make sure both cords sit properly in the stopper's grooves. Press the stopper tightly into the hole in the floor of the base. Connect the open tube to the pump outlet fitting.
- 8) With the help of another person to hold items in place, gather the fountain together by slipping the collar into place in the top of the basin, push the ball top into the collar and tip the whole fountain upright. Check to make sure it is level and that the cords are exiting through the provided notch.
- 9) Read your pump and light instructions. Fill the bottom bowl with water. Then plug in the pump to enjoy your fountain. If the pump does not immediately


begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

## **Online Resources**

Products: <a href="www.henristudio.com/products">www.henristudio.com/products</a>
FAQs: <a href="www.henristudio.com/sarranty">www.henristudio.com/sarranty</a>
Contact: <a href="www.henristudio.com/contact-us">www.henristudio.com/contact-us</a>

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

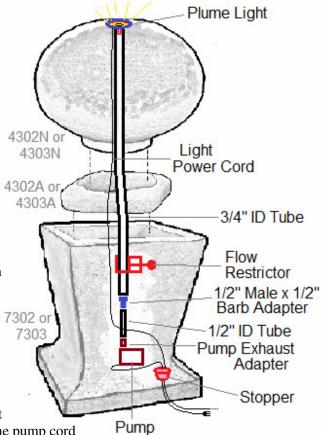

## **IMPORTANT - WINTER CARE**

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.