
SET UP INSTRUCTION for 4310F2

1) Prepare a suitable location for your new fountain, with a firm and level surface. Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.

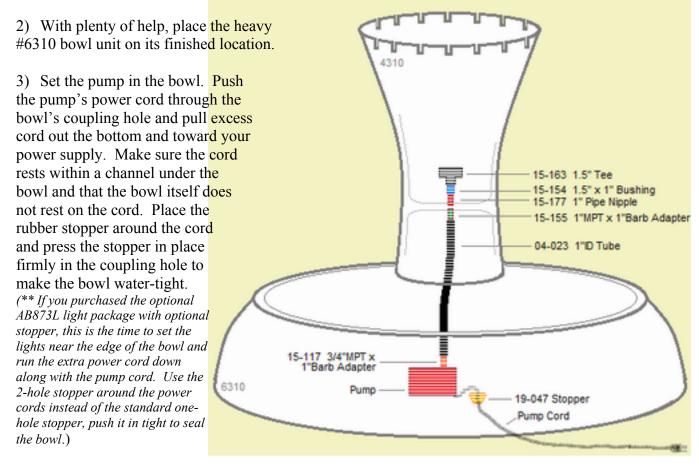

- 4) Thread the ³/₄"MPT x 1"Barb adapter into the pump.
- 5) Reach under the #4310 top unit and thread the 1"MPT x 1"barb adapter into the center hole. Attach the 1"ID tube to the adapter's barb end.
- 6) Then, reaching down into the top of the #4310, thread the 1" pipe nipple into the center hold. Onto this nipple, thread the 1.5" x 1" bushing. Finally, thread the tee onto the bushing as shown.
- 7) Again with help, set the #4310 top into the center of the 6310 bowl, over the pump. Reach through the access opening of the #4310 and push the open end of the tube onto the pump adapter.
- 8) Read your pump instructions. Fill the bowl with water. Plug in your pump.
- 9) Shims have been supplied should you need to level the #4310 for a more even water flow. Once any shimming has been done, place the #4310AD access door into the access opening near the pump.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.