

SETTING UP THE 4311F2

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Make sure your prepared setting is level, then place the fountain Bowl on the setting. Check it again for level.

2) Lay the 4311 fountain Top on its side, with its bottom end very close to the 6512 Bowl. From its top opening, slip the light power cord all the way down through the inner tube and out the bottom. Continue by running the same power cord down through the hole in the floor of the Bowl. Set the pump on its side (as shown) in the Bowl and also push its power cord through the hole and out the bottom. Lift the Bowl enough to pull the cords out under the notch in the Bowl.

3) At the hole in the floor of the Bowl, open the slits in the rubber stopper. Place the power cords in the pre-cast grooves in the stopper (pump cord in the larger hole) and close the slits. Then mosh the stopper into the hole with your thumbs until about 1/8" of the stopper remains above the concrete.

4) Thread the smaller barbed adapter into the pump top and press the water tube over the adapter's barbs.


5) The remaining, large barbed adapter has a groove cut across its threads. At the bottom end of the fountain Top, place the light power cord within this groove, with the threads up and barbs down as shown. Thread this adapter into the coupling cast beneath the Top.

6) With plenty of help, lift the Top, push the open end of the water tube onto the large adapter's barbed end, and set the Top onto the Bowl.

7) Use the supplied silicone sealant to attach a copper spill plate to each of the spill slots on the upper end of the Top. Use enough silicone so the water will not sneak around the outside of the spill plates, but run over the middle of the plate. The slightly wider end of the plate should be set at the outside of the Top.

8) Fill the Bowl with water. Read pump and light instructions. Turn on the pump and light. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

Csd 11/2020

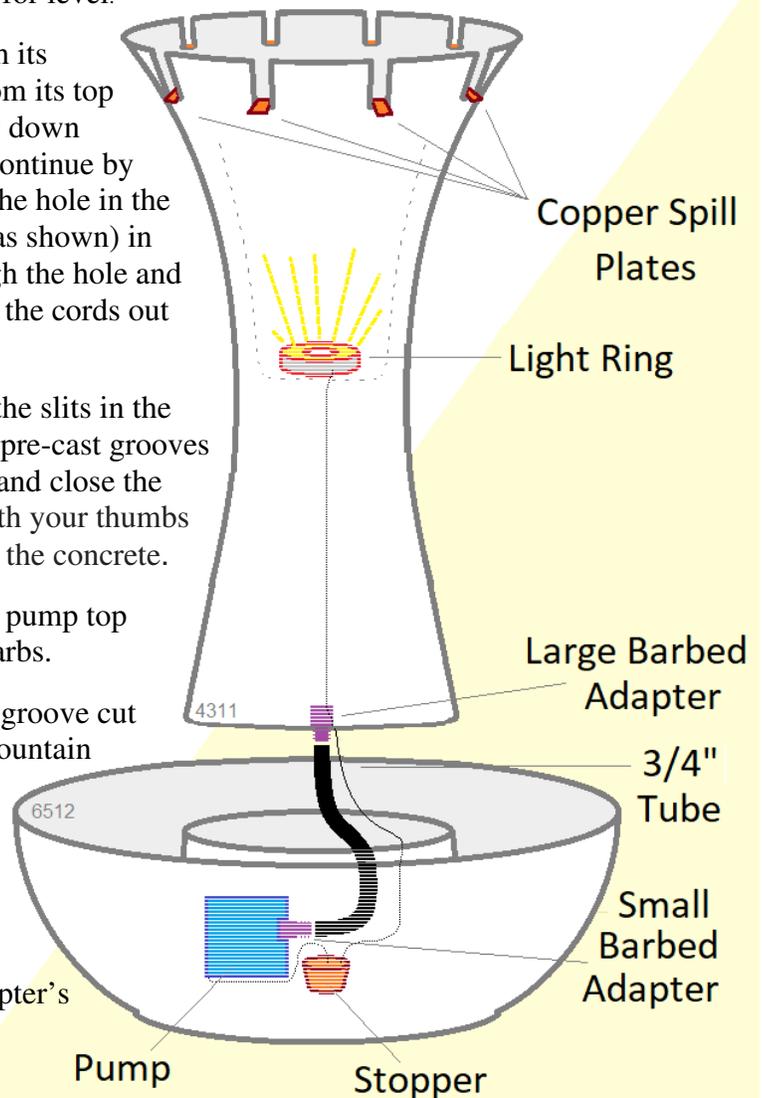

Online Resources
Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.