

SETTING UP THE 4358F2

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Place the bottom basin on your prepared site and check to make sure it is level. Place the fountain top nearby.

2) Position the Ring Light around the Clear Tube and its Swivel Adapter as shown. Push the light's power cord all the way down through the hole in the fountain top. Slip the light power cord fully into the slot in the threads of the swivel adapter. Then thread the swivel adapter (with tube and light) into the hole in the center of the top bowl.

3) The larger barbed adapter also has a slot cut into it. Working at the underside of the fountain top, slide the light cord into this barbed adapter's slot and then thread this adapter underneath the fountain top.

4) Place the Pump in the bottom basin. Push both the pump's and the Light's power cord all the way down through the hole in the basin floor, pulling both out from underneath toward your power supply.


5) Open the slits in the Stopper, insert the power Cords into the matching cast holes, close the slits and press the stopper firmly into the hole. About 1/8" of the stopper should remain above the floor for future concerns.

6) Thread the smaller Adapter into the pump top. Push the Water Tube onto the pump adapter.

7) With help, lift and gently set the fountain top on the basin, pushing the other end of the water tube on the adapter underneath the fountain top.

8) Use the silicone sealant provided to lay a line of sealant across the fountain top's four spill edges. Make sure there is plenty of sealant at the sides to keep water from flowing around the spills. Then press the four copper spill plates into place. It is best to let the spill plates overhang the spill edges by about 1/4" to help the water break naturally. Allow at least an hour of curing time before getting wet.

9) Fill bowls with water. Read pump and light instructions. Turn on the pump and light. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

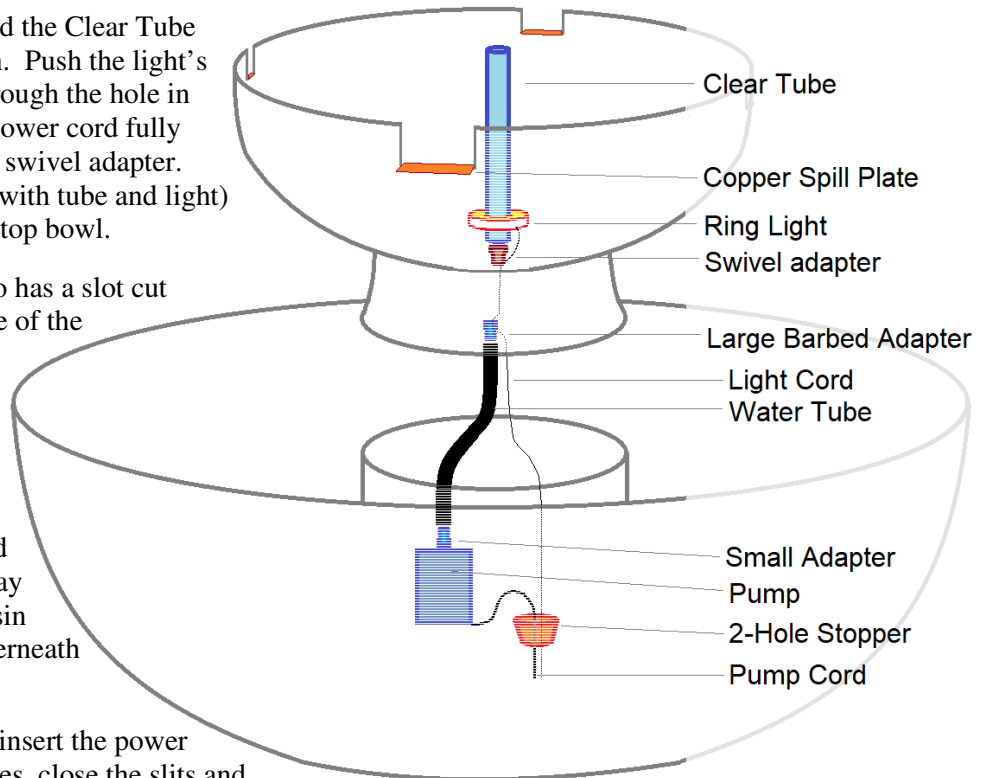

Csd 1/2020

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.