


SET UP INSTRUCTIONS FOR 4421F1 - 4424F1

- 1) Set your fountain on your chosen location and position it toward your preferred viewing direction.
- 2) Place the pump and light in the fountain floor. The pump should be behind the divider wall and the light should be out in front, aiming back at the middle of the high fountain wall.
- 3) Push both power cords out the floor's corner hole. Open the slit rubber stopper and place each cord inside one of the slit-holes. (The hole for the pump cord should be a little wider than the hole for the light cord.) Then push the stopper firmly into place to create a watertight fountain.
- 4) Thread the larger adapter into the coupling low, under the wall as shown and push the smaller adapter firmly into the pump.
- 5) Push the tubing onto the two adapters.
- 6) Use the provided silicone sealant to apply the copper spill plate atop the front of the wall. The sealant should be placed under and on the outsides of the spill plate. The plate should overhang somewhat for a good waterfall. (You may want to make sure the two guide holes in the spill plate are plugged with silicone to prevent any unwanted dripping.)
- 7) Place the black foam piece in the water channel behind the copper spill plate to smooth the water flow.
- 8) Read your pump and light instructions. Then connect the plug / transformer to your power source to see the fountain run. If your pump does not produce flow immediately, there may be an "air lock" in the impeller chamber. Simply unplug and re-plug the pump a few times to clear the air-lock.

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

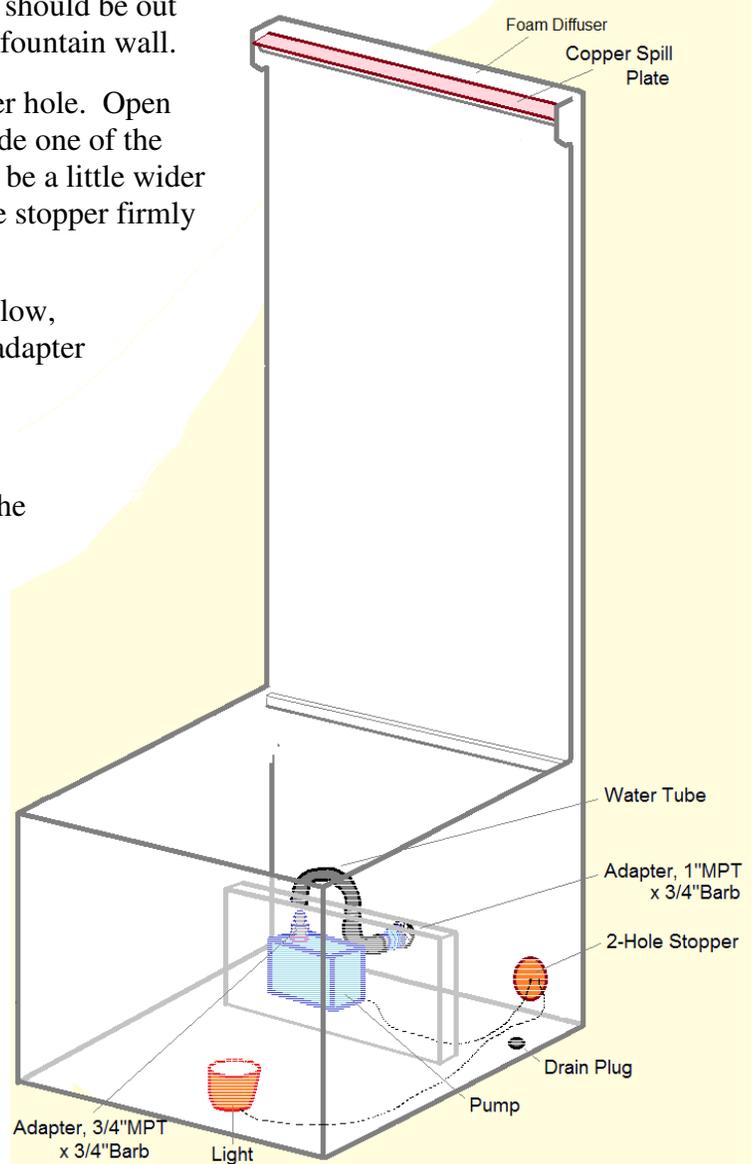

Online Resources
Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

6/18/20