
SETTING UP THE 4430F1

- 1) Set your fountain on the area you prepared to be firm and level.
- 2) Set the light and pump in the fountain basin. The light should be in front, angled up and back at the water spill. The pump should be near the back. Push each of their power cords down through the wide hole in the floor. Tip the fountain and pull the cords out from underneath toward your power supply.
- 3) Pull open the slits in the stopper and place the power cords in the molded grooves (the pump cord goes in the wider groove). Then close the stopper and mush tightly into the hole in the floor. The top of the stopper should remain up about 1/8" above the floor for future removal if needed.
- 4) Thread the adapters into the top of the pump and into the coupling in the back wall. Push the water tube onto the barbed end of each adapter.
- 5) Using the provided silicone sealant, lay a line of sealant across the level at which the water fall will spill over the edge and mount the copper spill plate firmly on this edge. The sealant should be a little heavier at the sides to prevent water from leaking around the sides. The spill plate should overhang the edge by perhaps ½" for the best water effect.
- 6) Tuck the foam diffuser in the top to smooth out the water supply.

7) Fill all bowls and pool with water. Read pump and light instructions. Turn on the pump and light. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in

a few times and it should start. Csd 12/2020

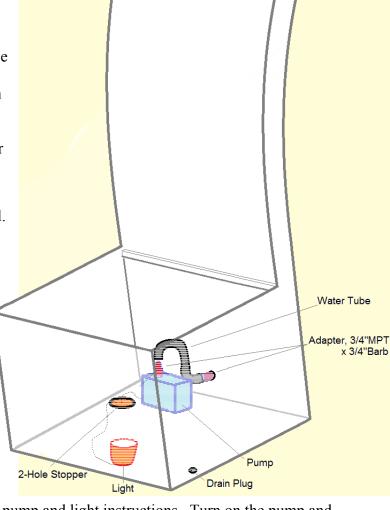

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let

Foam Diffuser

Copper Spill Plate

children climb on fountain.

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.