


SETTING UP THE ... 4441F1

- 1) Prepare a suitable location for your new fountain.
- 2) Place the pump and light in the fountain floor. The light should be out in front, aiming back at the middle of the high fountain wall.
- 3) Push both power cords out the floor's corner-side hole as shown. Open the split rubber stopper and place each cord inside one of the slit-holes. (The hole for the pump cord should be a little wider than the hole for the light cord.) Then push the stopper firmly into place to create a watertight fountain.
- 4) Thread the adapters into the coupling at the bottom of the fountain wall and into the top of the pump. Loosely place the two clamps onto the water tube. Push each end of the water tube over the adapters' barbs. Then tighten one clamp over each end of the tube.
- 5) Use the provided silicone sealant to apply the copper spill plate atop the front of the wall. The sealant should be placed under and on the outsides of the spill plate. The plate should overhang somewhat for a good waterfall. (You may want to make sure the two guide holes in the spill plate are plugged with silicone to prevent any unwanted dripping.)
- 6) Place the black diffuser foam piece in the water channel behind the copper spill plate to smooth the water flow.
- 7) Read your pump and light instructions. Fill the bottom bowl with water. Then plug in the pump and connect to the light transformer to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

8/2019

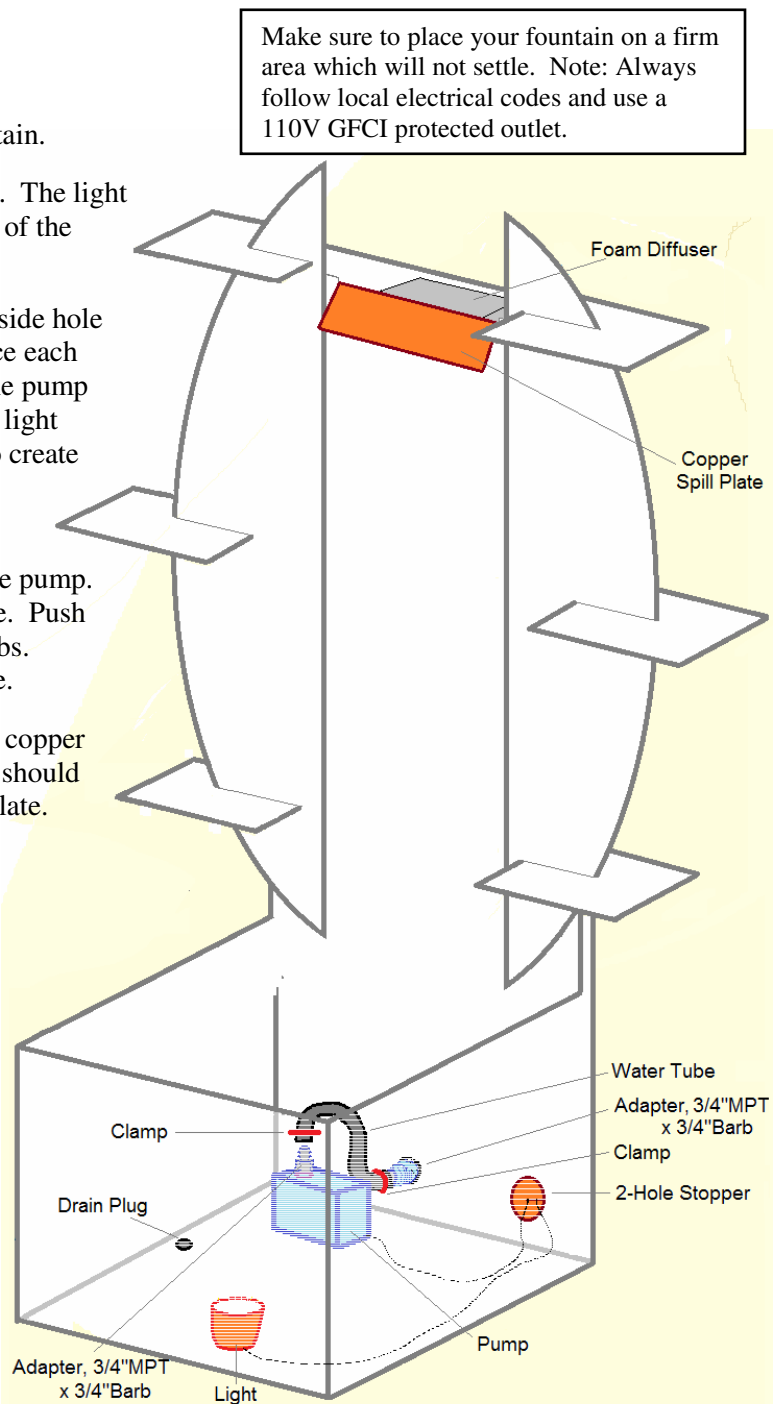

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.