

SETTING UP THE 4443F2 & 4445F2

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Place the 6442 Basin on your prepared, level setting. Set the Pump near the hole in the back floor of the 6442 basin and run its power cord down through the hole and out from under the back, through the notched passage-way. Thread the smaller barbed adapter into the top of the pump.

2) Place the Light in the front of the basin as shown and run its power cord back through the small hole in the dividing wall and down through the hole in the floor, alongside the pump power cord.

3) Open the slits in the stopper, place the two power cords in the appropriately sized grooves, close the stopper and press it into place in the basin hole. The stopper should only have about 1/8" of rubber showing above the hole which may help for removal in the future.

4) Thread the larger barbed adapter into the coupling under the bottom left side of the large fountain top. Push an end of the water tube onto the larger adapter and secure with one of the provided clamps. Lift the top piece over the basin and - as others hold it or as it rests on (you must pad this) the basin - push the bottom of the water tube onto the pump adapter and secure with a clamp. Gently set the top piece on the back of the basin.


5) Locate the long copper Spill Plate and the enclosed silicone sealant. Squeeze a thick bead of sealant out across the top indented spill area. Then press the copper plate into place, leaving about 1/4" overhanging the front of the 4443 or 4445 to help the water fall cleanly. Allow the sealant to dry for about an hour before introducing water to it.

6) Thread the long supply pipe into the left corner inside the top fountain piece, as shown. Place the black, foam diffuser block above the supply pipe to smooth the flow of water.

7) Fill both the basin and the top with water. Read pump and light instructions. Turn on the power to both. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

Csd

9/2021

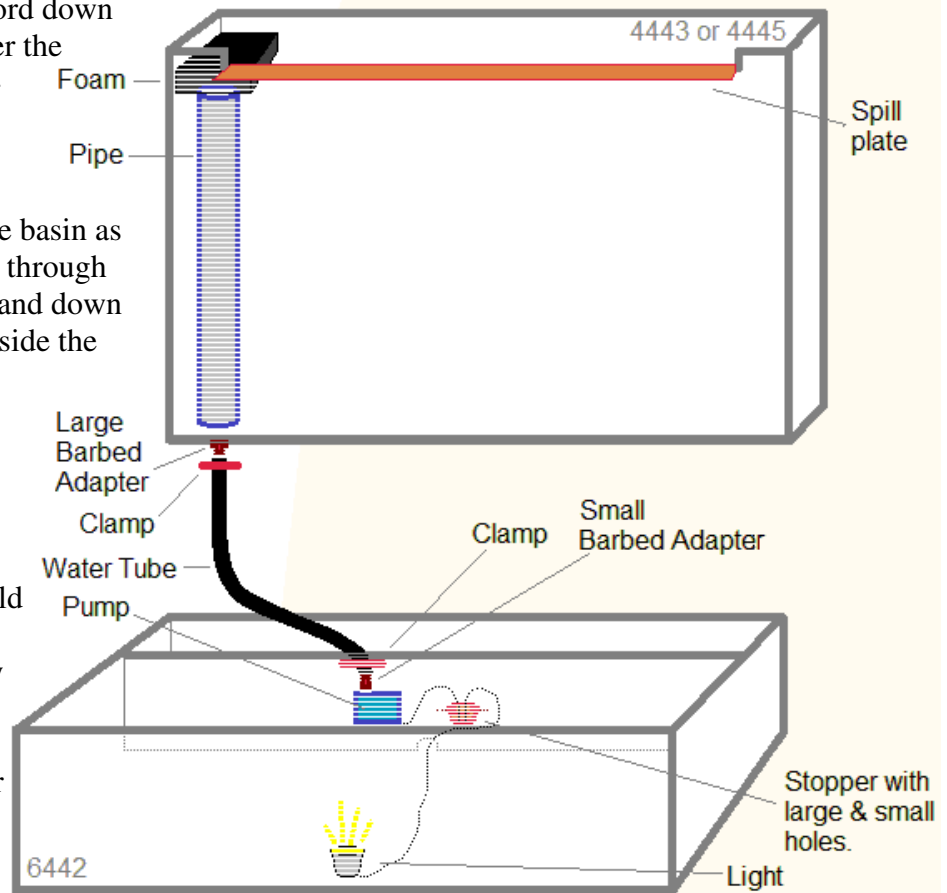

Online Resources
Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.