SETTING UP THE 4451F1 and 4452F1

1) Prepare a suitable location for your new fountain.

2) Set the fountain on your prepared area. Place the Pump and Light in the basin and slip both power cords out the largest hole in the back, stringing them toward your power supply.


3) Gently open the slit in the Stopper. Set the power cords in place in the molded holes (pump in the larger hole) and close the stopper. Then press the stopper tightly into the hole to create a waterproof basin.

4) Thread the $\frac{1}{2}$ " male x $\frac{3}{4}$ " barb adapter into the pump. Thread the $\frac{3}{4}$ " male x $\frac{3}{4}$ " barb adapter into the center hole in the back wall of the basin. Set the Flow Restrictor in the middle of the water tube, tightening just enough to hold it in place. Then push the ends of the water tube onto each barbed adapter.

5) Use the enclosed silicone sealant to attach the copper spill plate across the ledge of the spill wall as shown.

6) Read your pump instructions. Fill the basin with water. Then plug the pump in to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

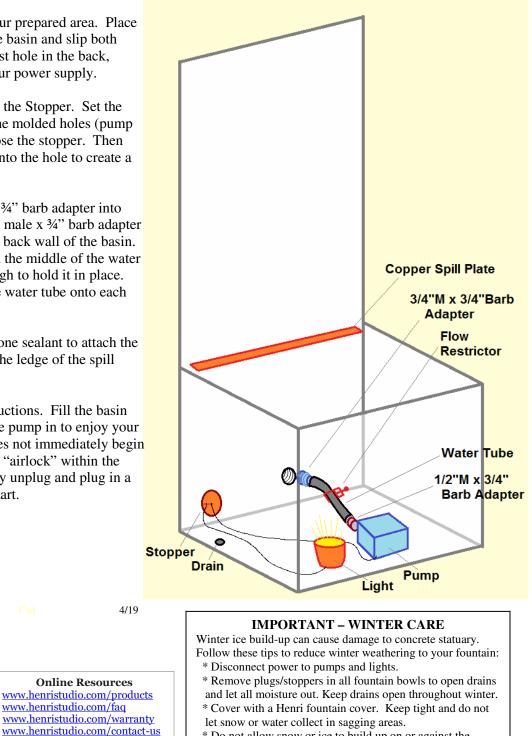

* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Products:

Warranty:

Contact :

FAOs:

4/19

Online Resources

www.henristudio.com/faq