## 4751F2 Jack's Dilemma Fountain 4755F2 Jack and Jill Fountain

1) Prepare a suitable location for your new fountain.

2) Place the basin on your prepared site. The basin has a notch in its top rim which is designed to help the pump cord exit. Rotate the basin to set the notch where you want the cord to exit.

3) Lay the top figure piece on its side in order to access the recessed area underneath.

4) Your fountain top includes a water supply and a drain. The tube from your pump will need to connect to a pipe which is cast into the stone underneath. If you have any doubts which pipe underneath should be connected to the pump, test by blowing through the spouting pipe located in the top bowl of this piece. The pipe underneath from which you feel air move is the one which needs to connect to the pump.

5) Push the pump exhaust adapter into the pump.

6) Connect the water tube to the pump adapter. Place pump in the basin and drape the extra power cord out through the notch.

7) With the fountain top tipped, attach the other end of the water tube to the supply pipe underneath.

8) Place the fountain top on the basin and rotate to your preferred viewing angle.


9) Read your pump instructions. Fill the bottom bowl with water. Then plug in the pump to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start. MAKE SURE TO CHECK YOUR WATER LEVEL PERIODICALLY. Do not let the pump run dry. 3/2019

**Online Resources** 

Products: http://www.henristudio.com/products FAQs: http://www.henristudio.com/faq Warranty: http://www.henristudio.com/warranty Contact: http://www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

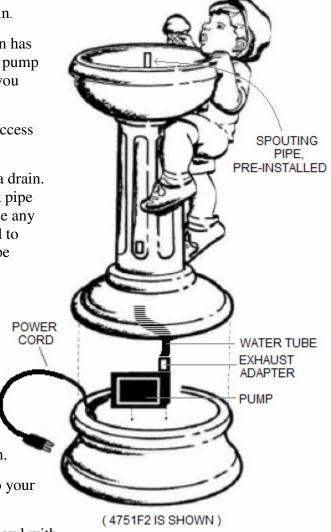

## **IMPORTANT - WINTER CARE**

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.