

# 4767F2 SET UP INSTRUCTIONS

1) This fountain is simple to set up, but it includes two heavy pieces. Two people will be necessary – especially when assembling the tubing connection. Always follow local electrical codes and connect to a safe GFCI circuit.

2) Prepare a firm and level surface for your new fountain. With proper help, place your fountain Basin on that surface. Make sure to face the groove underneath toward your power supply.

3) Install a barbed adapter into the pump.

4) Place the pump near the center of the Basin. Slip the power cord through the floor's center hole and, from underneath, pull the cord out toward your electrical connection.

5) Place the rubber stopper on the pump cord about 10" from the pump body. The larger end of the stopper should be closest to the pump. Push the stopper firmly in place within the Basin floor center hole to create a water-proof seal. (The top of the stopper should remain about 1/8" above the basin floor.)

6) Be very careful handling the heavy Vase. To avoid damage to the intricate stone patterns on its side, never rest it against other hard objects.


7) While one person tips the Vase back to provide access, thread the remaining barbed adapter into the coupling inside the lower cavity of the base.

8) Push one end of the 3/4" tubing over the barb you just installed inside the Vase. Install the Restrictor clamp a few inches from the other end of the tube. Tighten the restrictor just enough to secure it in place on the tube. (Once operating the fountain, you can tighten the restrictor to lessen your water flow if desired.)

9) With the Vase in place in the middle of the Basin and over the pump, push the tubing onto the pump adapter. Then, inside the top of the vase, thread the 1/2" nipple into the coupling in the vase floor and thread the check valve (flap side up) on the nipple.

10) Place the small concrete Access Door into the door opening and fill the Basin unit with water to about 1" from the top.

11) Read your pump instructions. Then connect the pump to your power supply to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start. If this does not work, make sure your check valve is attached in the correct direction. Save this instruction and make sure to winterize according to details below.

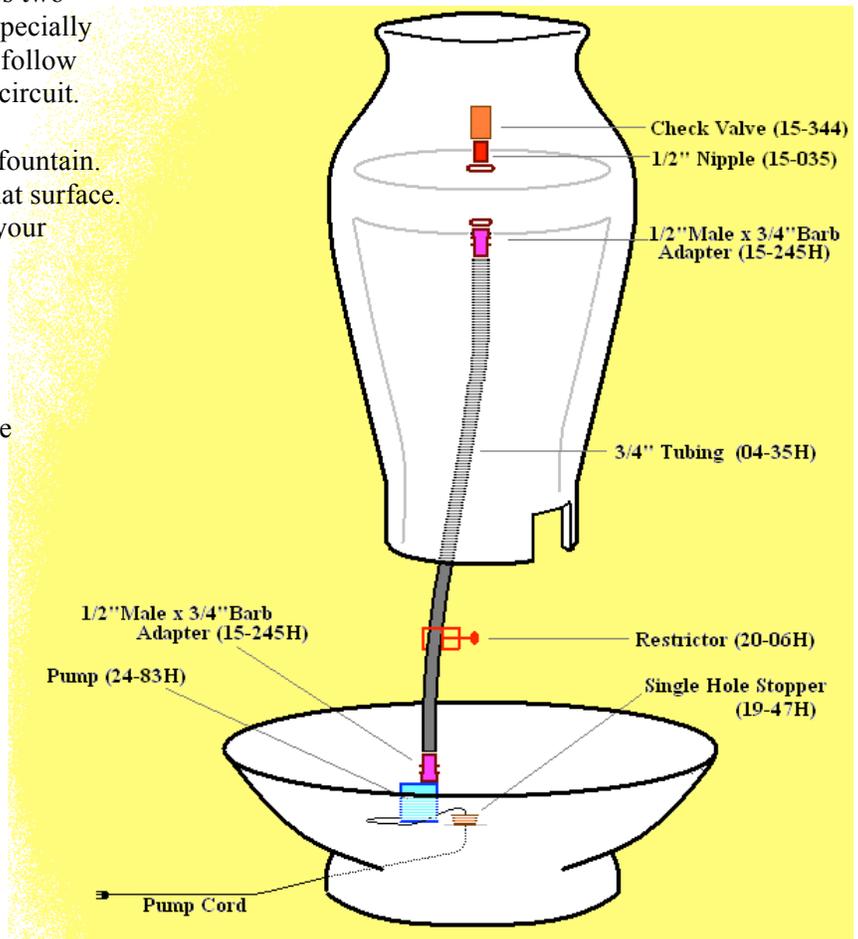

## IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps.
- \* Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.