


Triple Leaf Fountain (4953F2)

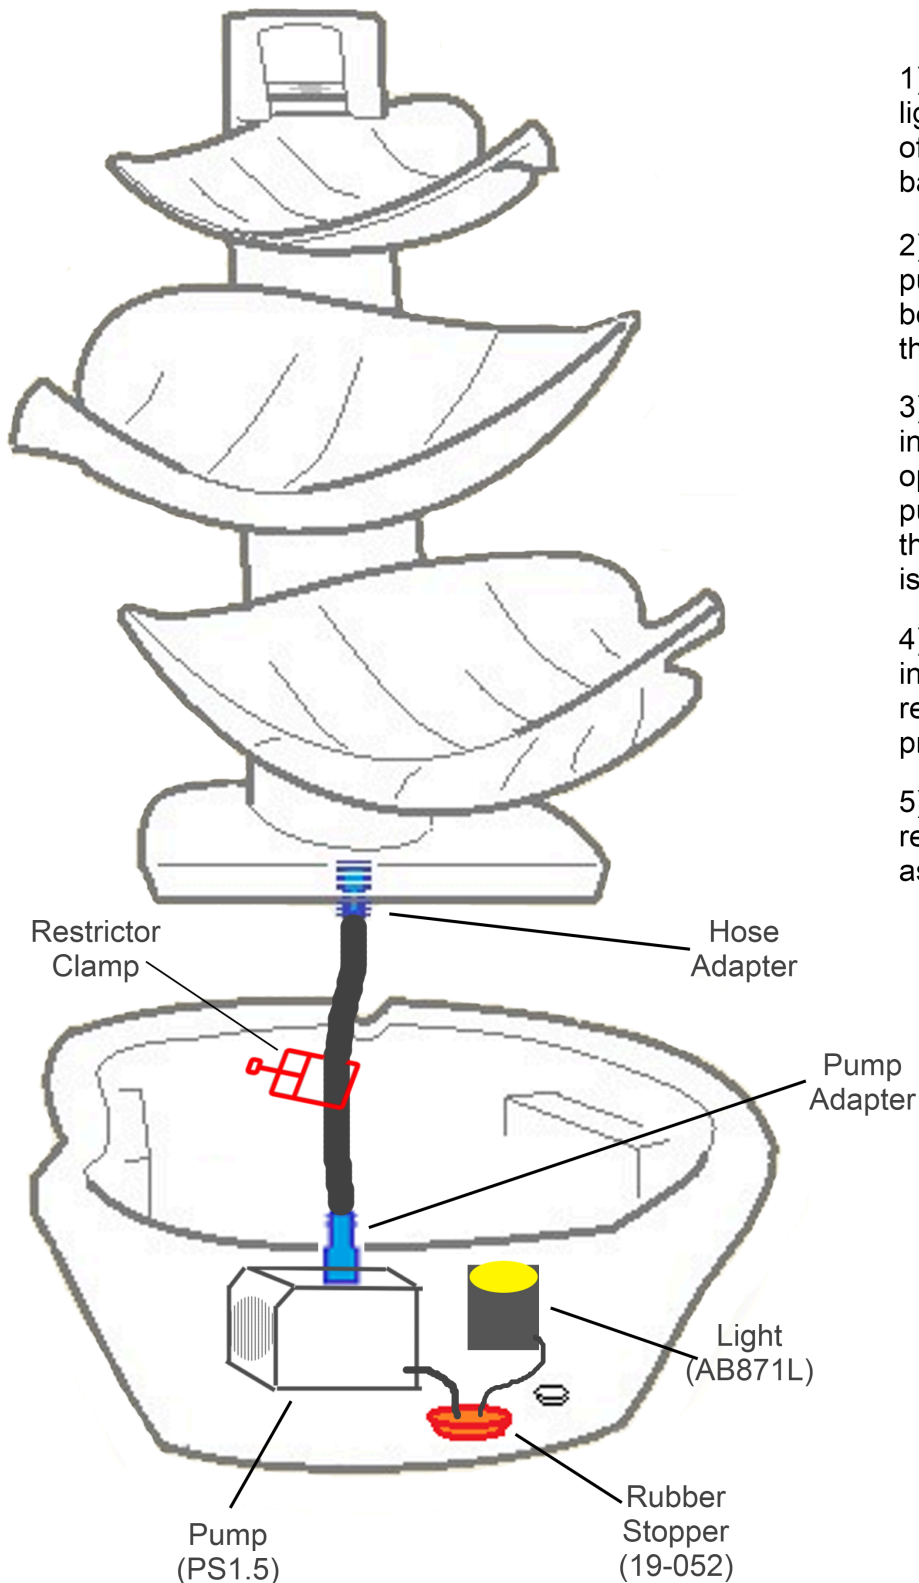

1) Set the light in the basin. Run the light cable out the hole in the bottom of the basin, leading outside the basin.

2) Set the pump in the basin. Run the pump cable through the hole in the bottom of the basin, leading outside the basin.

3) Install the rubber stopper in the hole in the bottom of the basin. Peel it open to place it around the light and pump cables. Press down far enough that no more than 1/4" of the stopper is protruding above the concrete.

4) Install plumbing exactly as outlined in the diagram. Ensure to place the restrictor over the hose before pressing the hose onto the adapters.

5) Fill and run the fountain. Use the restrictor clamp to reduce/balance flow as necessary.

Questions? Email ProductSupport@HenriStudio.com

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

IMPORTANT - WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.