 


# 5011F6 SET UP INSTRUCTIONS

- 1) Prepare a suitable location for your fountain. The fountain needs the support of a firm and level surface.
- 2) Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.
- 3) Place the 6290H Bowl on your prepared surface. The bowl has a groove built under it intended to protect the power cord. Make sure to face that groove toward your power supply.
- 4) Place the Pump in the center and push the power cord down through the center hole. Pull the cord out from under the bowl and toward your power supply. Fit the Stopper with the small hole around the power cord and push into the Bowl's center hole to make water tight.
- 5) Thread the Barbed Adapter into the top of the pump. Then push one end of the long tube onto the barbed end of the adapter.
- 6) Pulling the tubing up through the 7011H Pedestal, set this Pedestal over the pump.
- 7) With adequate help, place the 6011CH Bowl on the 7011H Pedestal – pulling the tube up through the center hole as you do. Seal the hole by installing a Stopper around the tube and pressing tight. Use shims as you go to adjust to level.
- 8) Slip the 20-06H Restrictor around the tube and pull down to about 6" above the stopper. Turn it tight enough to stay in place. You can use this later to turn down the water flow if you wish.
- 9) Set the 6011BH BOWL/PEDESTAL on the 6011CH, again pulling the tubing up through the center hole and sealing the hole with a stopper.
- 10) Then, do the same with the 6011AH BOWL/PEDESTAL.
- 11) Place the 5011H FINIAL on top, with the remaining tubing slipped up inside.
- 12) Fill the bowl unit with water to about 1" from the top.
- 13) Read your pump instructions. Then, plug in the pump to enjoy your fountain. If desired, you may dial down the top water action by pushing the tubing further down in the finial or reduce the general flow by tightening the restrictor.
- 14) Save this instruction and make sure to winterize according to details below.

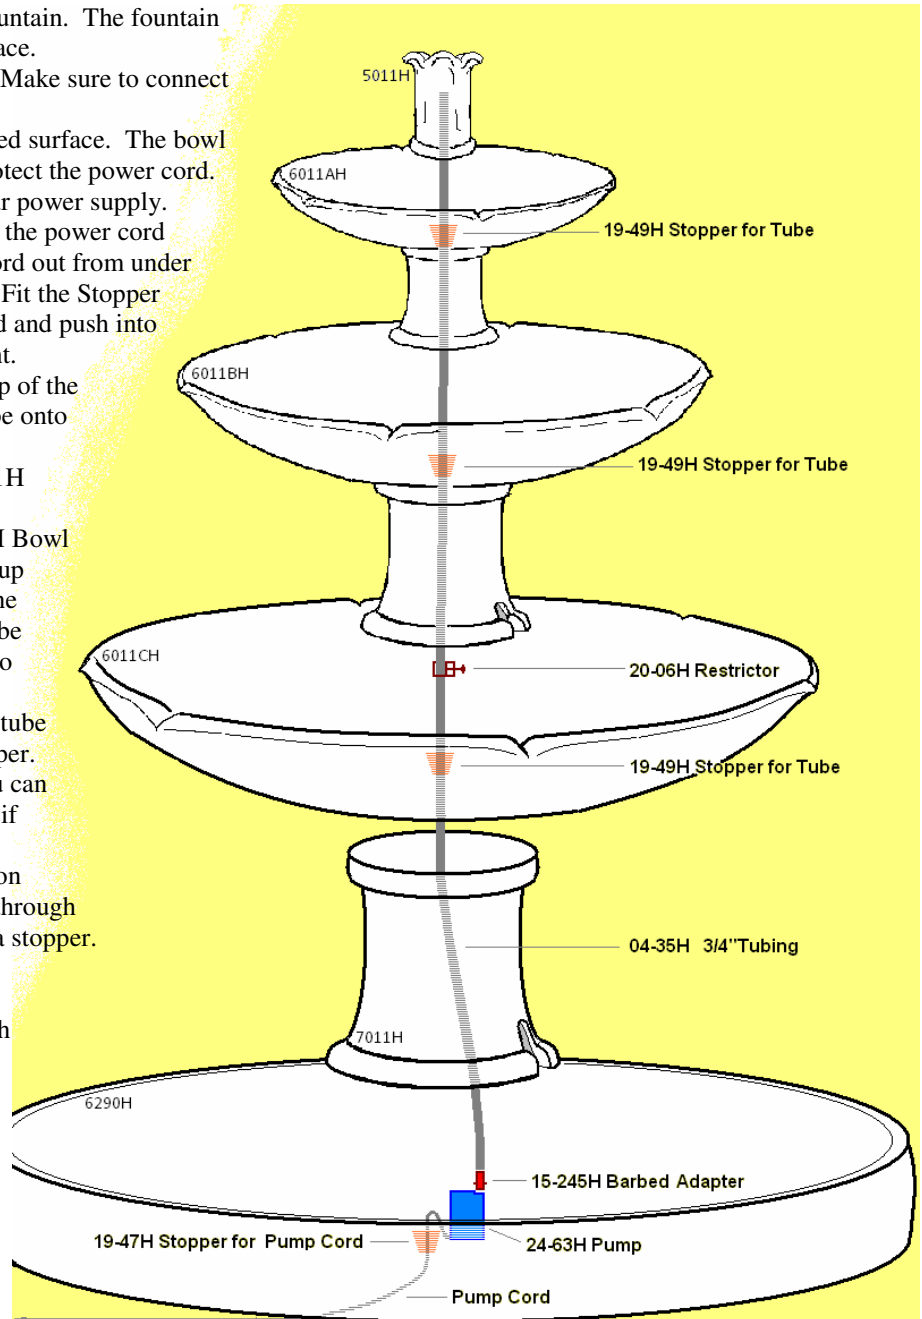

Csd

## IMPORTANT – WINTER CARE

- Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:
- \* Disconnect power to pump.
  - \* Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
  - \* Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
  - \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.