SETTING UP THE 5040F6

1) Prepare a suitable location for your new fountain. Recruit some strong helpers and place the 7049 Base on your prepared location with the access opening at bottom facing your power supply.

2) Set the 6059 lowest Bowl on the 7049 base. Place the pump inside the Bowl. Push its power cord down through the hole in the floor of the bowl. Reach through the ground level access opening to pull the power cord out toward your power supply. Use the supplied shims to re-level the bowl if needed.

3) Open the Stopper with the smallest hole and place it on the pump power cord, close to the pump. Close the stopper around the power cord and press it tightly into place in the hole. Thread the Barbed Adapter into the top of the pump. Push the water tube onto the barb.

4) With help, set the 6049 Lower Bowl-Pedestal inside the 6059 bottom bowl. As you lower it in place, slide the water tube up through the middle of the 6049. Once the 6049 rests on the bottom bowl, open one of the stoppers with the large hole, place it around the water tube near the floor of the 6049, close the stopper and press tightly into the hole.

5) Put the 6039 Middle Bowl-Pedestal inside the 6049 by repeating the same steps in stage #5.

6) Set the 6029 Top Bowl-Pedestal inside the 6039 – sliding the exposed water tube up and through as you put the 6029 down. Use some of the provided Caulking Tape to seal up the space around the water tube where it emerges above the 6029 bowl.

7) Divide the remaining caulking tape and press onto the bottom of the 5040 Finial Top. Slip the water tube up into its center channel as you place the 5040 finial on the 6029 bowl-pedestal.

8) Organize the copper spill plates from small to medium to large. Use the provided silicone sealant to affix them onto the cutaway spill slots in the top three bowls. Make sure to lay a bead of silicone all the way across each spill cut-out to prevent any water from slipping underneath the spill plates, or around the sides.

9) Read your pump instructions. Fill the bottom bowl with water. Then plug in the pump to enjoy your fountain. If the pump does not immediately

begin working, there may be an "airlock" within the

impeller chamber. Simply unplug and plug in a few times and it should start.

MOUNT COPPER SPILL PLATE ON VERTICAL SIDE

OF SPILL, NOT ACROSS

THE TOP OF SPILL


	Online Resources	
Products:	www.henristudio.com/products	
FAQs:	www.henristudio.com/faq	
Warranty:	www.henristudio.com/warranty	
Contact:	www.henristudio.com/contact-us	

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT - WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

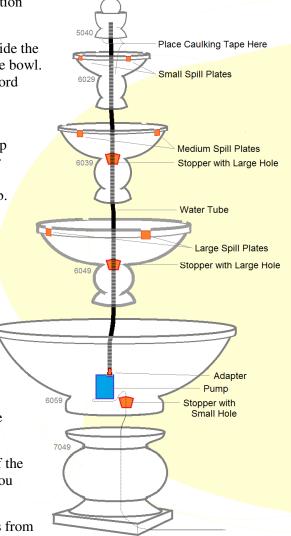

Make sure to place your fountain on a firm area

which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected