

## SETTING UP THE 5049F5...

1) Prepare a suitable location for your new fountain. Since this is a tiered, heavy fountain, the base needs the secure support of a firm and level surface.

2) DO NOT ROLL 6048B Bowl on its upper rim as this may chip the rim. Use plenty of others to help lift.

3) With the assistance of others, place the 7048A Pedestal on your prepared site with the rectangular side opening facing your power supply.

4) Place the heavy 6048B Bowl on the Pedestal. (It is recommended to use an outdoor forklift or other lifting equipment.) Place the pump in the center of the bowl and run its power cord down through the center hole. Reach through the pedestal's rectangular access doorway and pull the cord out.

5) Inside the 6048B Bowl, open the 19-047 stopper's slit and around the pump power cord. Press the stopper into the center hole in order to make the bowl water-tight. Then thread the 15-245 1/2" threaded adapter into the top of the pump. Push one end of the tube onto the adapter's barb. Slip the flow restrictor onto the tube near the pump.


6) Set the 7048A Pedestal in the center of the 6048B Bowl. Be careful to not crush the tube. Once set, pull the tube up and out of the pedestal.

7) Place the 6048AN Bowl on the 7048A Pedestal. As you set in on the pedestal, have one person push the tube up through the center hole of the Bowl. Set the bowl all the way down. Open and install the 19-049 Stopper around the tube where it comes up through the bowl and press down to make this bowl water-tight also.

8) Place the 5049 Finial in the top bowl by first slipping the remaining tubing up into the finial and then setting the finial in the center of the bowl. (Some fountain owners like to insert the small brass nipple into the very top to make their water jet up higher, but this is not the recommended set up of the fountain. It is not really needed.)

9) Read your pump instructions. Fill the bottom bowl with water. Then plug in the pump to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

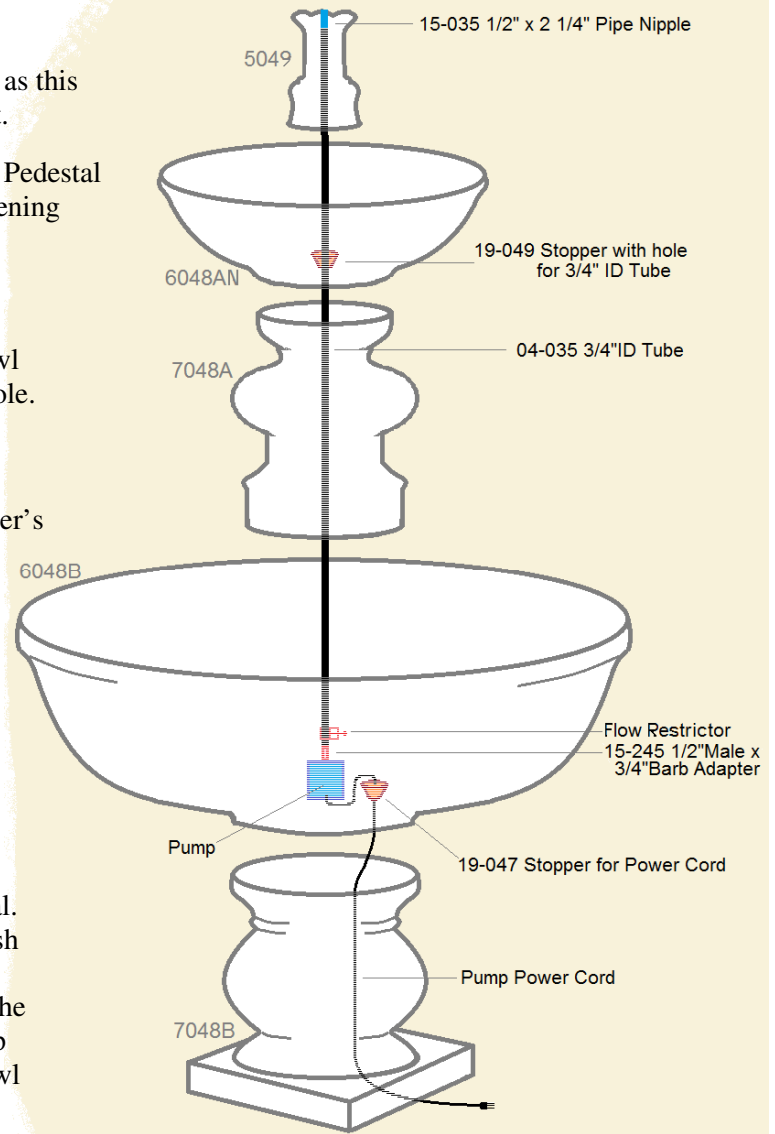

**Online Resources**  
Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
Contact: [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

### IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pump.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.