


SET UP INSTRUCTION for 5061F1

1) Prepare a suitable location for your new fountain, with a firm and level surface. Always follow local electrical codes. Make sure to connect to a safe 110V GFCI circuit.

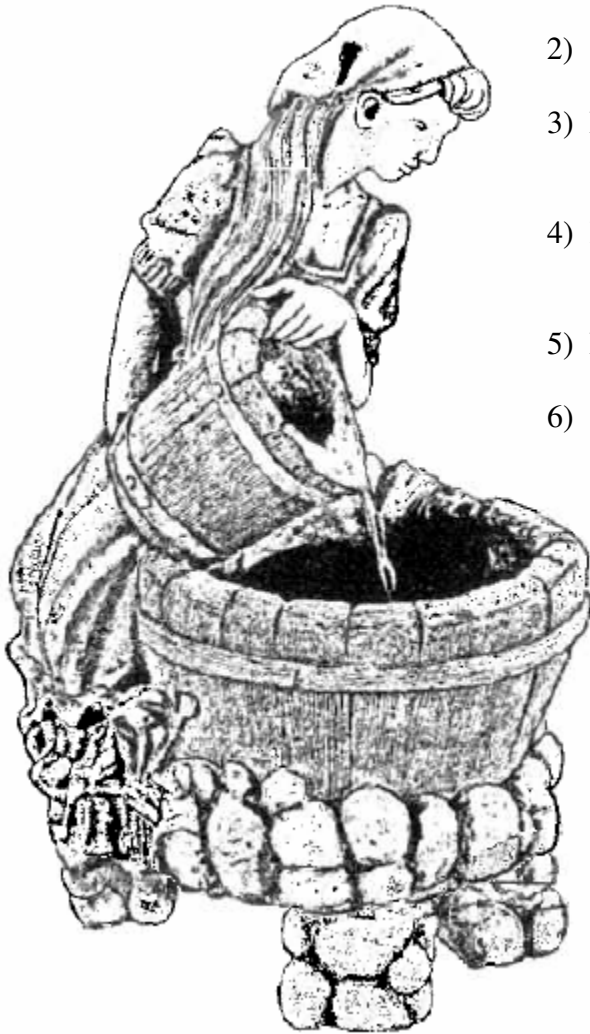

- 2) Set this one-piece fountain in the prepared location.
- 3) Place the pump inside the fountain's basin and route its power cord out the back through the provided notch.
- 4) Install the small pump exhaust adapter into the top exhaust opening of the pump.
- 5) Push the water tube onto the pump exhaust adapter.
- 6) Slip the flow restrictor clamp onto the middle of the tube and tighten just enough to hold it in place.
- 7) Push the other end of the water tube onto the metal pipe inside the fountain basin.
- 8) Fill the basin with water. Read your pump instructions. Then turn the pump on. (If it does not immediately start pushing water there may be an airlock in the impeller chamber. Simply unplug and re-plug several times to clear the airlock.)
- 9) If you wish to reduce the amount of water, tighten the flow restrictor which you installed on the water tube.

5/3/17

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.