

# SETTING UP THE 5215F17

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Study the placement of parts in the drawing below.

2) Set the fiberglass pool on your prepared site. Place pump in the pool and run its power cord down through the center hole. Pull it out from underneath toward your power supply, making sure it is protected between the supportive ridges of the pool. Choose the appropriate stopper for your installation (*lights or no lights*) and seal the pool floor hole with it.

3) Thread the 3/4" male x 1" barb adapter into the pump and attach the longest tube with a clamp.

4) With help, set the heavy 7218 base and 6219 bowl in place, pulling the water tube up through the center each time. Thread the 2" x 12" standpipe in the center of the bowl using teflon tape or caulk to seal, then place the 7216 pedestal in the bowl.

5) Thread the two 1" male x 1" barb adapters into the bottom and inside of the 6217 bowl. Push the long tube onto the bottom adapter and clamp it as you set the 6217 on the 7216.


6) Create the tee assembly shown in the inset circle. Make sure to clamp the adapter into the end of the black tube. Then place it in the 6217 bowl, attaching the shortest clear tube to the barb inside the bowl.

7) Place 7215 in the 6217 around the tube. Push the threaded end of the 3/4" male x 1/2" barb adapter into the top of the clear tube and clamp it secure. Push the 1/2" black no-kink tube onto the barb.

8) Set the 6215 on the 7215, slipping the tubing up inside as you lower it. Use the rubber stopper with the widest hole to fit around the tube and into the inside hole of the 6215 to seal it. Then place the 5215 on the 6215, slipping the tube up inside it.

9) Fill all bowls and pool with water. Read pump instructions. Turn on the pump.

If it does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start. Once all is running well, set the eight 9019 pieces against the pool.

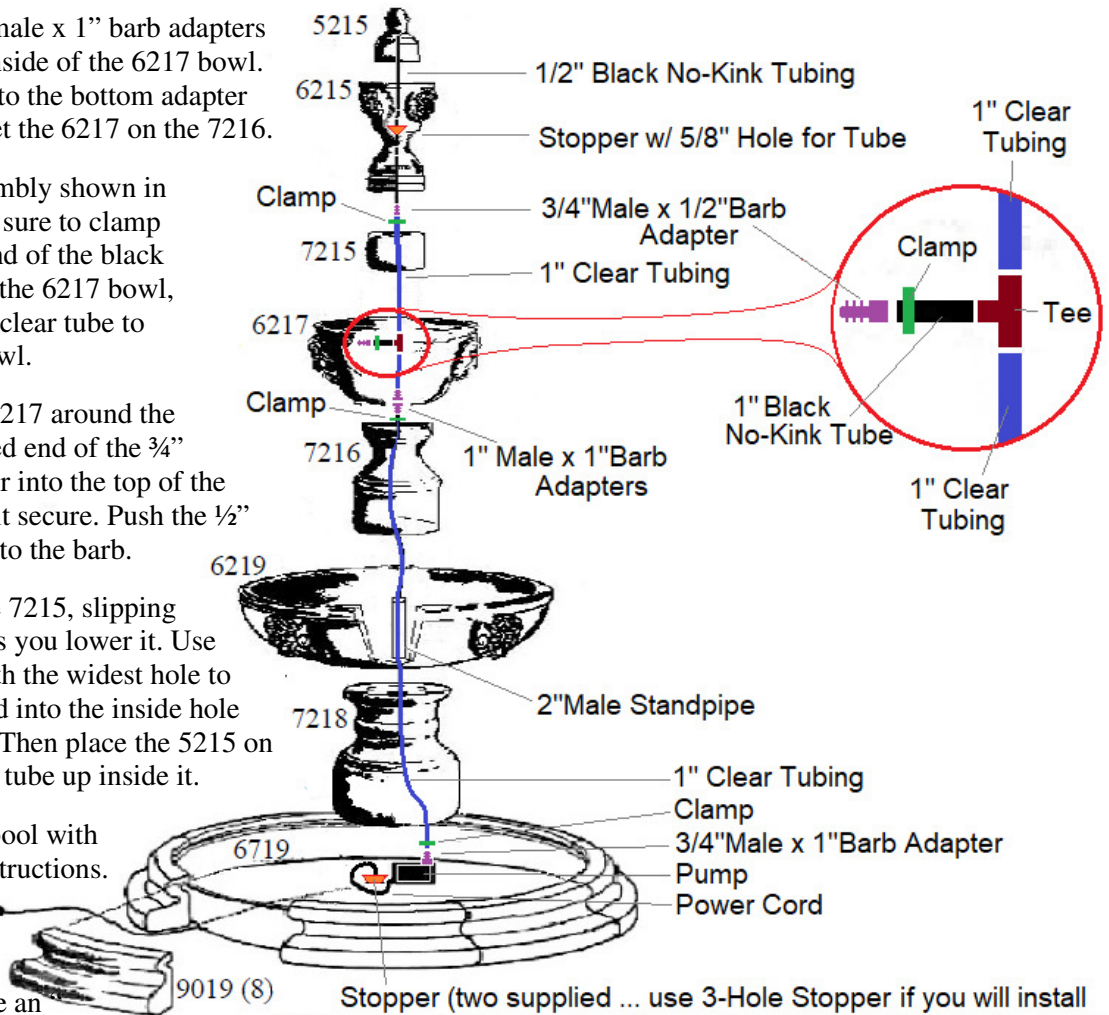

Stopper (two supplied ... use 3-Hole Stopper if you will install lights or use 1-Hole Stopper if you will not include lights in the pool)

## IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

### Online Resources

Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
 FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
 Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
 Contact: [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: Using Chlorine or Chlorine Bleach or water coloring additives or salt may damage the finish of your fountain.

Csd 4/2024