

SET UP INSTRUCTION for 5280F3

1) Prepare a suitable location for your new fountain, with a firm and level surface. Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.

2) Place the 7280 Base on the finished location. The Base has a small access opening near the bottom. Turn the access opening away from your normal angle of viewing.


3) Set the 6280 Bowl on the Base.

4) Place the pump in the Bowl and drop the power cord down through the center hole. Reach inside through the Base's access opening to grasp the power cord and pull it out for later connection. Slip the rubber stopper around the power cord and press down in the center hole to create a water tight bowl.

5) Insert the exhaust adapter into the top of the pump. Slip the tube onto the adapter.

6) The 5280 Pineapple has a barbed adapter cast into the inside for the tube connection. Look inside to confirm this. Then lift this 100 lb. top heavy piece over the bowl (with the help of another person), tip it sideways, push the tube onto the barbed adapter, and place the Pineapple down over the pump.

7) Fill the basin with water. Read your pump instructions. Then, plug in the pump power cord to enjoy your fountain. (If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.)

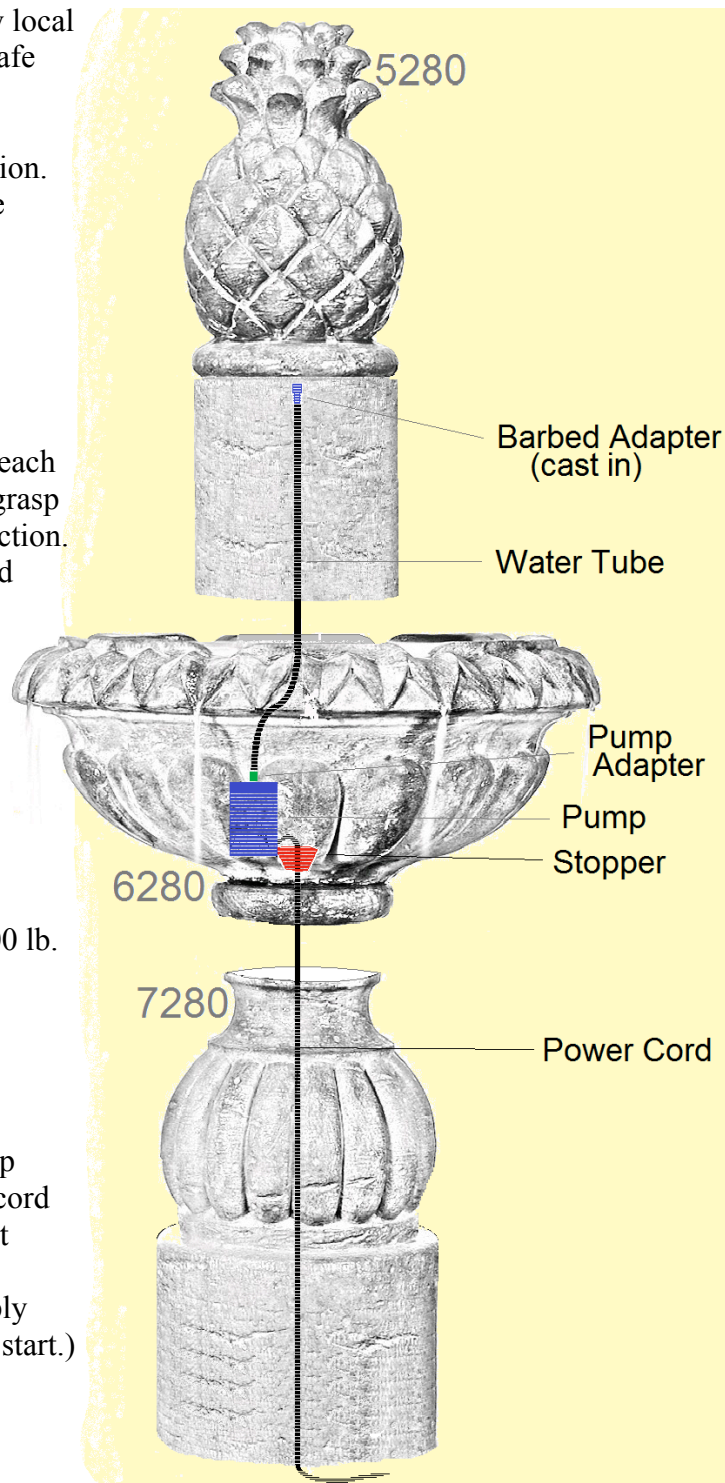

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.