

5307F2UG SET UP INSTRUCTIONS

1) This fountain is designed to sit on an in-ground reservoir. Start by reading through the very practical reservoir manual. Following its advice, use a shovel to dig the hole for the reservoir. Place the reservoir in the hole so the top will be level or barely below the surface of your lawn, then softly backfill around the sides of the reservoir.

2) Always follow local electrical codes and connect to a safe GFCI circuit.

3) Install the smaller thread-by-barb adapter into the top of the pump. Place the pump near the center of the Reservoir. Push one end of the water tube onto the pump adapter. Open the access door in the Lid. Place the Lid onto the Reservoir and pull the pump power cord through the access door and the water tube through a drilled hole (see manual).

4) With help, lay the heavy fountain Vase on its side with the bottom nearest the lid's access door. Inside the lower cavity of the Vase you will notice a pre-installed threaded nipple. Thread the Check Valve onto this. Make sure to look at the arrow on the valve and to position it so the water can flow upward.


5) Insert the larger Barbed Adapter into the open end of the valve. Slip the Restrictor Clamp into the middle of the water tube and tighten it just enough to hold it in place. (Later on, if you wish, you can tighten this restrictor further to reduce the water flow.) Then, push the open end of the water tube over the barb.

6) Now, as many as three strong helpers need to lift the Vase upright and set it in place in the middle of the Reservoir Lid. *Do not simply tip the Vase up which may focus too much weight on a small, isolated spot on the Lid.* You may need to turn the open slot under the Vase toward the Lid's access door to allow the tubing to freely enter the Vase.

7) You can now cover the Lid with stones or other decorative material to make it look more natural.

8) Fill the Reservoir with water. Make sure to keep it filled. (Water bubbles or slow moving water are often signs that you are almost out of water.) Read your pump instructions. Then, connect the pump to your power supply to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

9) Your fountain is set up to run water smoothly. If you want an active "plume" of water above the vase, call 800-782-8831 to ask about the optional flexible nozzle and bushing, #15-304 and #15-004.

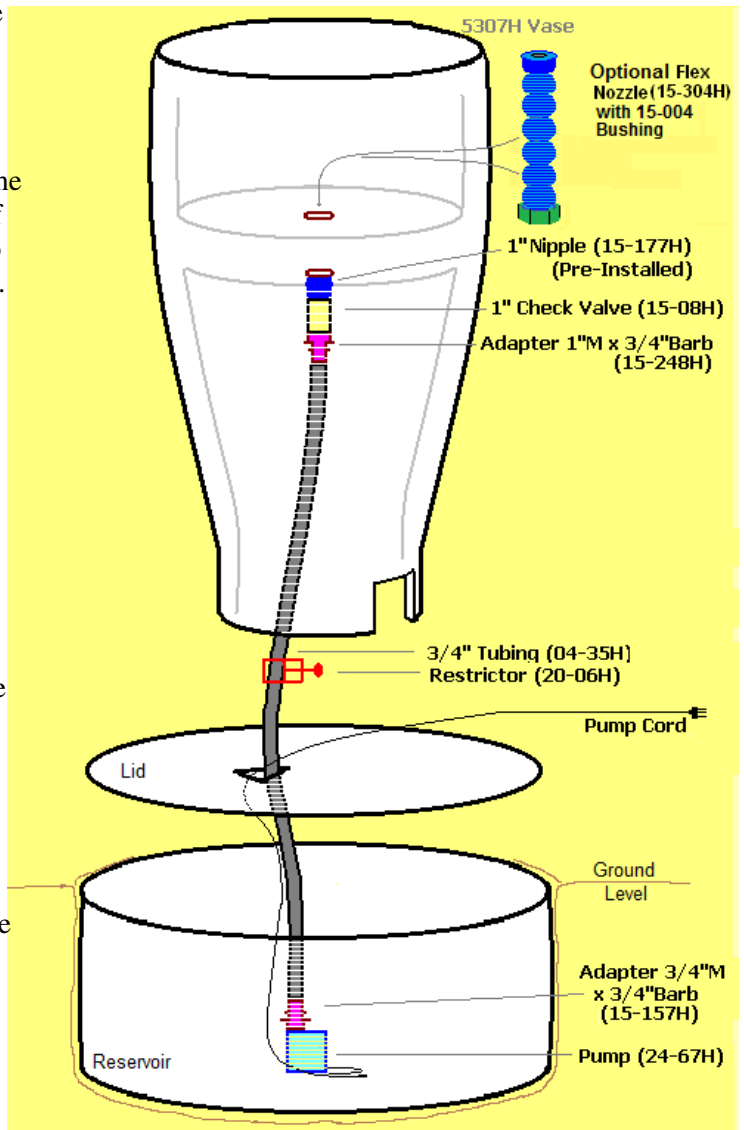

10) Save this instruction and make sure to winterize according to details at left. 7/2020

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps.
- * Remove plugs / stoppers / check valve in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.