

5324F2 SET UP INSTRUCTIONS

1) Prepare a suitable location for your new fountain. The fountain needs the support of a firm and level surface.

2) Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.

3) Place the 5324B Basin unit in its finished location.

4) Place the pump in the right side of the Basin and the light in the left side. Face the pump intake side downward to prevent air intake. Push the light cord through the lower opening between the left and right side. Slip both the pump cord and the light cord down through the hole on the back right side of the Basin and pull out from underneath the Basin, leading to where you will connect the power.

5) At the point where the power cords enter the Basin hole, slip the two-hole rubber stopper around each cord. Then push the stopper firmly down to create a water tight seal.

6) Thread the 3/4" x 3/4" adapter into the pump top.

7) Push one end of the 1/2" tube onto the small leg of the tee. Push equal lengths of the 3/4" tubing onto the larger legs of the tee. (If the 3/4" tubing is a single piece, simply cut it in half before mounting.)

8) Push one end of 3/4" tubing onto the pump adapter.

9) Drape the 1/2" tubing out the groove in the back of the Basin.

10) Thread in the 1" x 3/4" adapter underneath the 5324A Top.

11) Push the remaining open end of 3/4" tubing onto the 1" x 3/4" adapter. You may be able to do this with the Top laying next to the Basin.

12) Mount a flow restrictor on the upper 3/4" tube, tightening just enough to hold it in place.


13) With help, pick up the 5324A Top and set in on the Basin, making sure to not pinch the 1/2" tubing running out the back grooved area.

14) Thread the barbed adapter into the back of the Top. Then, push the open end of 1/2" tubing onto the barbed elbow.

15) Fill the bowl unit with water to about 1" from the top on the left side.

16) Read your pump and light instructions. Then, connect the light power cord to the transformer provided and plug in the transformer and pump to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

17) Save this instruction and make sure to winterize according to details below.

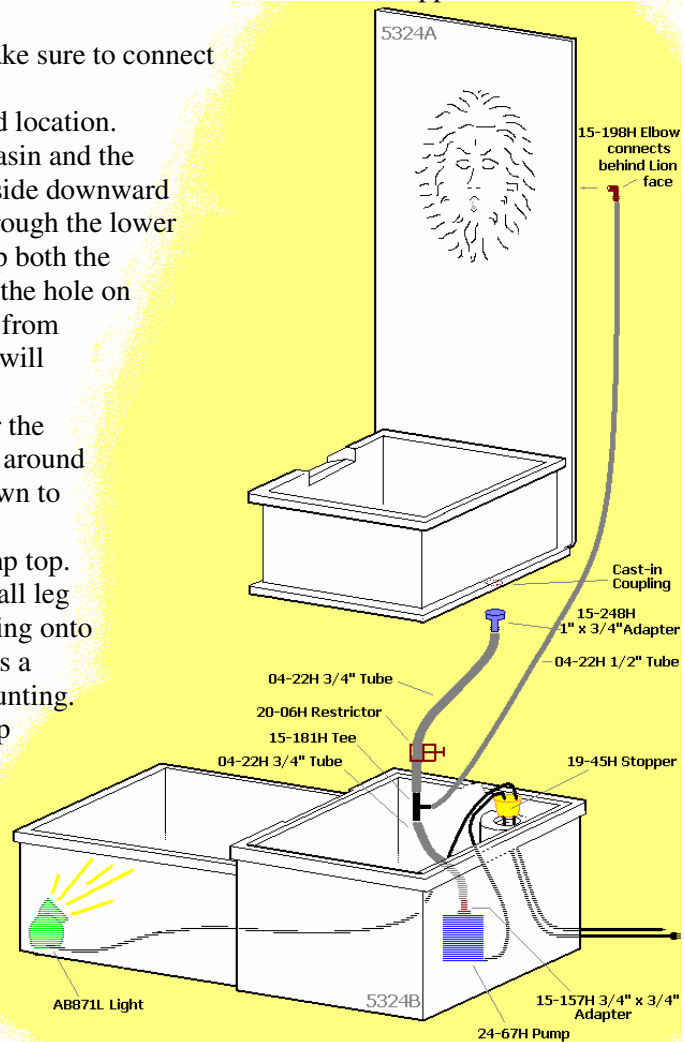

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.