

SET UP INSTRUCTIONS for 5329F2A & B

Make sure to place your fountain on a firm area which will not settle.
Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

1) Set your fountain Basin on your chosen location. Turn it so the inside access hole at the bottom faces toward your electrical connection. Make sure the basin sits level.


2) For the moment, set the fountain Top next to the basin. Attach one of the long water tubes to the bottom of the plume light and slip the plume light's power cord and tube down through the largest of the three holes in the fountain Top until the plume light ring rests just inside the hole. Then take the power cord and push it down inside the basin through the basin's exit hole on the lower side, pulling the extra length of cord all the way out the bottom.

3) Place the pump in the bottom of the basin and, in a similar manner, slip its power cord through the same hole in the basin and out the bottom. Then, open the rubber stopper and set the two cords inside (pump cord in the larger stopper hole, light cord in the smaller hole). Push the stopper down into place in the basin's hole to form a water tight seal.

4) Thread one of the adapters into the top of the pump. Assemble your water flow system by first attaching a small length of tubing to the pump adapter. Position the flow restrictor clamp in the middle of the tube as shown. Tighten it just enough to hold in place on the tube. (Later, once you start the fountain, you can tighten this more if you want to reduce the fountain's water flow.) Then as shown push the end of a barbed tee into the tube. Add a small length of tube above the tee and push the middle barb of the second tee as shown into that tube. Next, push the two remaining long tubes onto the two end barbs of the second tee.

5) Thread the two remaining adapters underneath the two open holes in the fountain top. Hold the fountain top near the basin and push the tubes onto the two adapters. Also push the tube extending down from the light onto the remaining open tee barb. Then set the top down on the ledges within the basin.

6) Fill the bowl unit with water to about 1" from the top. Read your pump and light instructions. Connect the light power cord to the transformer provided and plug in both the transformer and pump to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

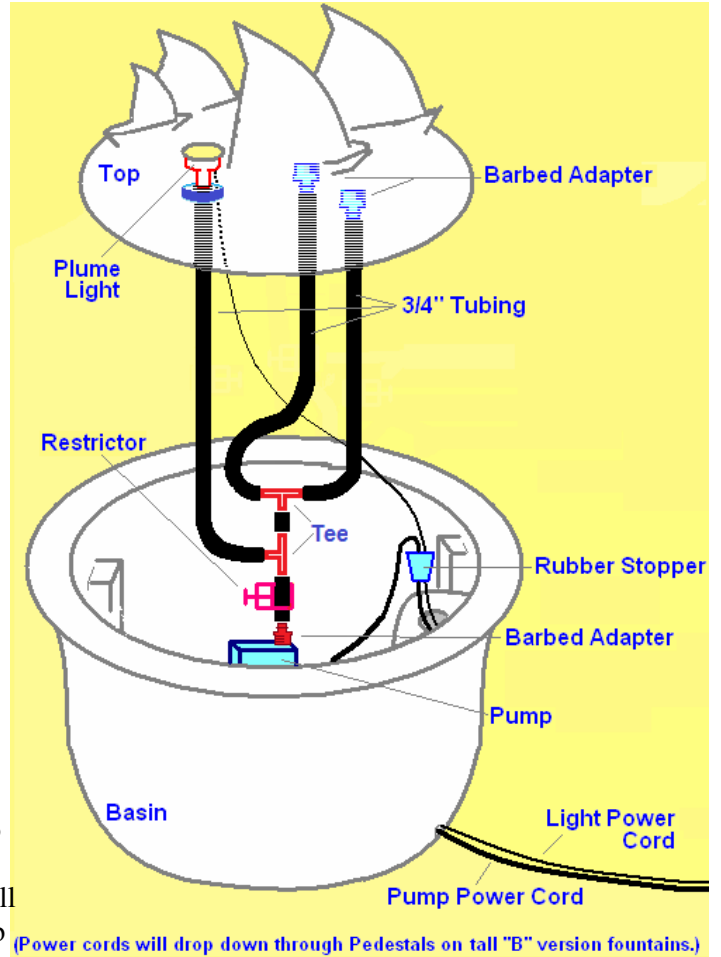

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.