

SETTING UP THE 5444F2A, 5444F2B, 5446F2

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

1) Prepare a suitable location for your new fountain. It is especially important – if you have the taller 5444F2B or the 5446F2 – that it is on a permanently stable and level surface.

2) Set the Basin/Pedestal unit down on the prepared surface with the bottom power cord notch turned toward your power supply.

3) From above, insert the 1” long ring of clear tubing into the center of the fountain Top. Allow this to nest in a level direction about ¾” or so below the surface of the fountain top.

4) Secure one end of the ¾” tube over the barbed attachment under the light. From above, insert the light and tube along with the power cord down through the hole in the center of the fountain top. The light should fit snug in the center hole of the fountain top.

5) Then twist the threaded end of the ½” MPT x ½” barb adapter into the other end of the ¾” tube. Push one end of the smaller ½” tube over the barbed end of the adapter. Place the Restrictor in the middle of the smaller tube, tightening just enough to hold it in place there. (Once operating the fountain, you can tighten the restrictor to lessen your water flow if desired.)


6) Set the pump inside the fountain basin. Push the small Exhaust Fitting into the top of the pump. Then push the open end of the tube over the exhaust fitting.

7) Place the rubber stopper on the pump cord about 10” from the pump body. The wider end of the stopper should be closest to the pump. Then, insert the power cord from the light into the stopper’s other hole. The length of the light cord from the light should be at least 6” longer than the water tube.

8) Slowly lower the Top into place in the Basin. As you do, guide the two power cords down through the center hole. With the help of another person to hold items in place, tip the whole fountain back just enough to reach underneath and pull the loose cords out the access hole.

9) Returning your attention to the inside again, make sure the pump is sitting down in the lowest part of the Basin. Push the rubber stopper firmly in place to create a watertight seal.

10) Read your pump and light instructions. Fill the bottom bowl with water. Then plug in the pump and connect to the light transformer to enjoy your fountain. If the pump does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start.

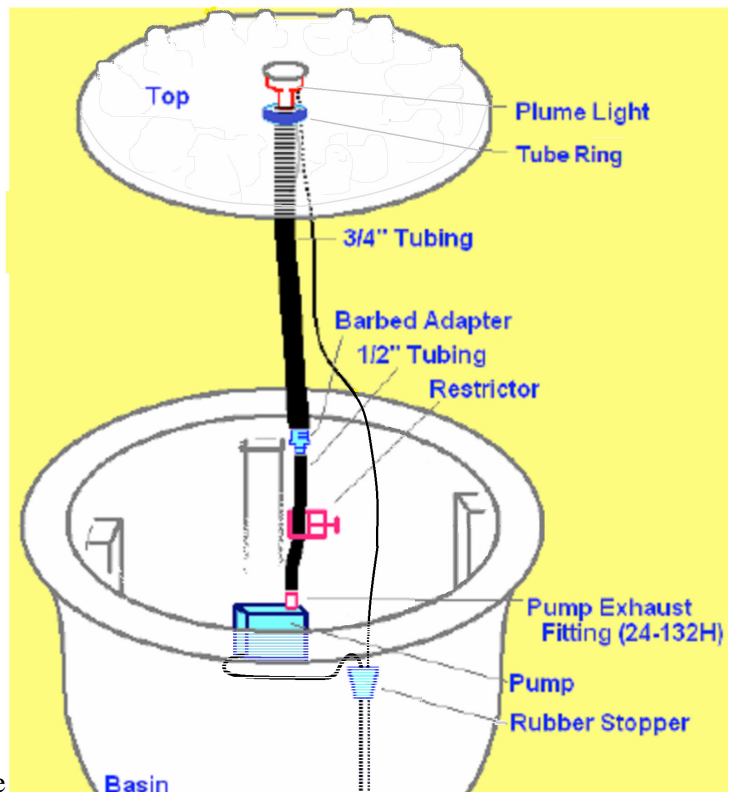

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.