

SETTING UP THE 5513F6

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

1) Prepare a suitable location for your new fountain. Locate the 6289 Pool in the center of your site. Pool must be level.

2) Place Pump in the center of the Pool. Slip the pump cord through the hole near the center of the pool floor and pull it out from underneath the pool toward your power supply. Seal the hole using the 1-hole rubber stopper by opening the slit in the stopper, placing it around the pump cord, and pushing down into the hole.

3) Connect the Bushing to the pump exhaust opening. Connect the longest Tube to the bushing and secure using a Screw Clamp.

4) Set the 7715 Pedestal in the pool around the pump and tubing. As you set the 6615 Bowl on the pedestal, feed the tube up through the center hole of this bowl. Set the bowl down and check how level it is. Add shims if necessary. Then, slip the 8" long Standpipe down around the tube and screw it into the hole in the bowl.

5) Push the larger Tee into the end of the tube. Then push 12" x 3/4" tubes over the other two legs of the tee. Secure all with screw clamps. Then mount a Flow Restrictor to the side-spilling tube (as shown in drawing) by tightening it just enough to hold in place.


6) As you then set the 6614 Bowl on the 6615, feed the upper tube up through the center hole of this new bowl. Check for level. Slide the shorter standpipe over and down around the water tube until you screw it into place in the bowl's hole, then add the reducing tee to the top of the tube.

7) Connect two 1/2" tubes to the other legs of the tee and secure with the remaining clamps. Attach another flow restrictor to the side-spilling tube as before.

8) As you place the 6613 Bowl on the 6614, feed the tube up through it and check for level as before. In this bowl, seal the hole with the Large-Holed Rubber Stopper. Simply open the stopper at the slit, place around the tube near the hole, and push tightly into the hole. Attach the third flow restrictor to the tube near the stopper.

9) Thread the Barbed Adapter into the underside of the 5513 Finial Bowl. Lower the 5513 toward the 6613 bowl and connect the open tube to the barbed adapter, then set on the 6613.

10) Fill all basins and pools with water. Read pump instructions. Plug the pump in to start the fountain. Adjust shims to adjust any level concerns. Tighten any of the flow restrictors if you want to reduce the water flow anywhere. Keep this instruction to remind yourself of winterizing tips.... Csd 4/19

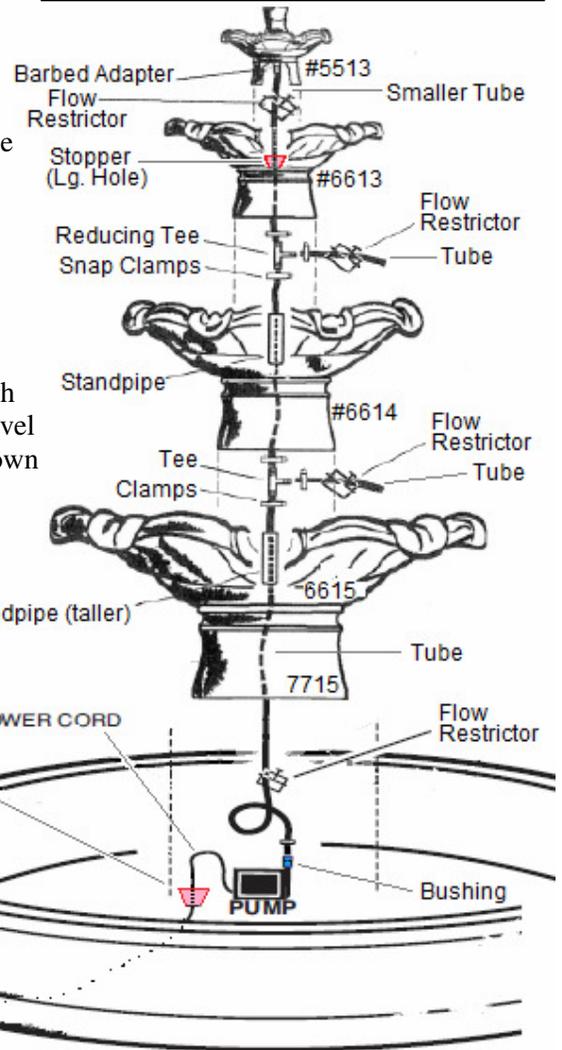

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

Online Resources

Products: www.henristudio.com/products
 FAQs: www.henristudio.com/faq
 Warranty: www.henristudio.com/warranty
 Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.