

SETTING UP THE **5532F5** and **5532F6**

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

1) Prepare a suitable location for your new fountain. For the 5532F5 place the 6289 Grandio Pool on that setting with the notch at the lower edge for the power cord facing your power supply. For the 5532F6 place the 7532 Base and 6534 Bowl on the location, with the notch in the base facing the power supply. (The 5532F6 is drawn at the right. Both fountains use the same plumbing design.)

2) Set the pump in the middle of the 6289 Pool or 6534 Bowl. Push its power cord down through the hole in the middle of the pool/bowl. Tip the lower piece(s) in order to grab the power cord from underneath – pulling it out toward your power supply. Install the rubber stopper with the smaller hole by opening its slit, placing it around the power cord just above the hole in the floor of the pool/bowl, and press into the hole to make a water tight pool/bowl.

3) Thread the smaller adapter into the top of the pump. Push the long tube over the barb of this adapter. Slide the Flow Restrictor clamp down over the tube and tighten it just enough to hold it in place a few inches above the pump. (The restrictor can be tightened more later if you want to slow down the water flow.)


4) Lower the 7533 Base over the pump and tube and set on the pool or bowl below. Pull the tube up out of the 7533 Base. With help, lower the 6533 Bowl onto the base, pushing the tube up through the center hole of the bowl before setting it down.

5) Open the slit in the rubber stopper with the larger center hole. Place it around the water tube just above the 6533 Bowl and press it into place in the bowl.

6) Thread the two larger adapters into the top and bottom of the hole through the 6532 Pedestal Bowl. Lower this pedestal bowl into the 6533 Bowl – pushing the end of the water tube up onto the barb underneath – before setting it down.

7) Push the smaller water tube onto the barb in the floor hole of the pedestal bowl. Set the 5532 Finial onto the top bowl, pushing the water tube up into it as you set it down.

8) Read your pump and light instructions. Fill the bottom bowl with water. Then plug in the pump and connect to the light transformer to enjoy your fountain. If the pump does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start.

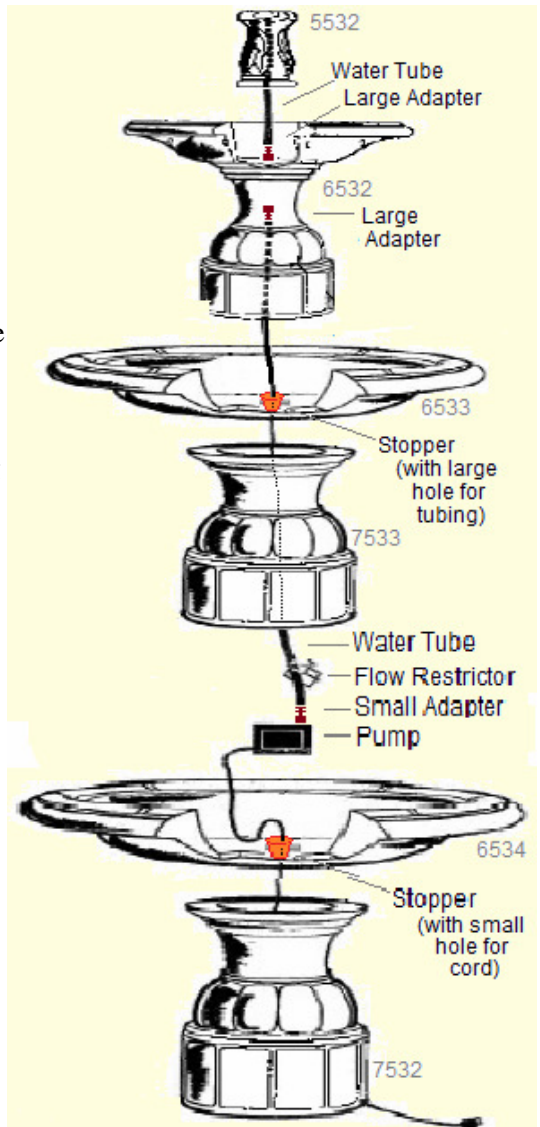

csd 5/2019

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.