

SETTING UP THE 5540F4 or 5670F

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Set the 7450 Pedestal and 6450 Bowl on the prepared, secure setting.

2) Place pump in bowl, run power cord down the center hole and out notch at bottom toward power supply.


3) Open slit in stopper, place around power cord, and press into hole tightly to make fountain watertight. About 1/8" of stopper should remain above the coupling.

4) Insert adapter into top of pump, push tube onto adapter. Place restrictor clamp around tube and tighten just enough to hold in place. (This can be tightened more later if you want to reduce the water flow.)

5) Place the 7140 pump cover in the bowl. As you lower the 5540 or 5670 top piece onto the pump cover, push the open end of the tube onto the metal pipe protruding beneath the top piece. Then set the top piece down.

6) Fill with water. Read pump instructions. Turn on the pump. If it does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

Csd 5/2020

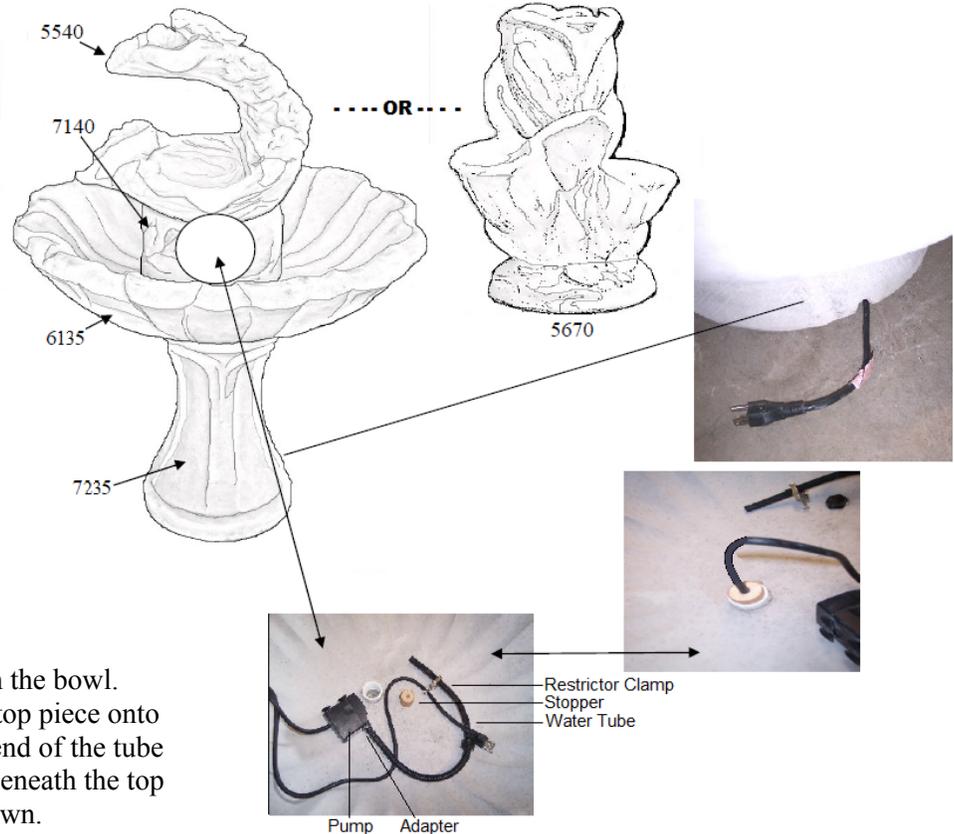

Online Resources
Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.