


# SETTING UP THE 5595F6

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

- 1) Prepare a suitable location for your new fountain.
- 2) Locate the 7597 Base in the center of your prepared site. The notch at the bottom of the Base should be turned toward the back of the fountain set-up. This notch is for the pump power cord to exit.
- 3) Place the 6597 Bowl on top of the Base. Set the pump inside the Bowl. Thread the small adapter into the top of the pump. Push the pump power cord down through the larger open hole in the middle of the Bowl. With help, tip the Bowl and Base to reach underneath and pull the power cord out at the notch. Just a few inches away from the pump, open the slit in the Stopper and place it around the pump power cord, then push the Stopper down in the hole to make the bowl water-tight. Close the other hole with the plug provided.
- 4) Push the longest tube segment onto the pump adapter and secure with a clamp. Place the Flow Restrictor around the middle of this tube and tighten just enough to hold it in place. (*This restrictor can be tightened after you start running the fountain. Tightening the restrictor will reduce the water action, should you want the fountain to run more gently.*) Then set the 7596 Pedestal onto the Bowl and pull the tubing up through the Pedestal.
- 5) Tip the 6596S Spill Bowl on its side on a protective sheet (burlap, excelsior, towel, etc.) and thread in two of the larger adapters, top and bottom. Then, place this Spill Bowl onto the Pedestal, pushing the tube from below onto the lower adapter. Secure with a clamp. Check to see if the Spill Bowl is level. Insert shims if needed to make it more level.
- 6) Push the next longest tube onto the adapter in the Spill Bowl.
- 7) Tip the 6595 Tier/Pedestal on its side just as you did with the Spill Bowl and thread in the remaining barbed adapters to the bottom and top. Then set the Tier/Pedestal into the Spill Bowl - attaching the open end of the tube to the bottom adapter as you lower the Tier/Pedestal.
- 8) Push the remaining short piece of tubing over the adapter's barb in the top of the Tier/Pedestal.

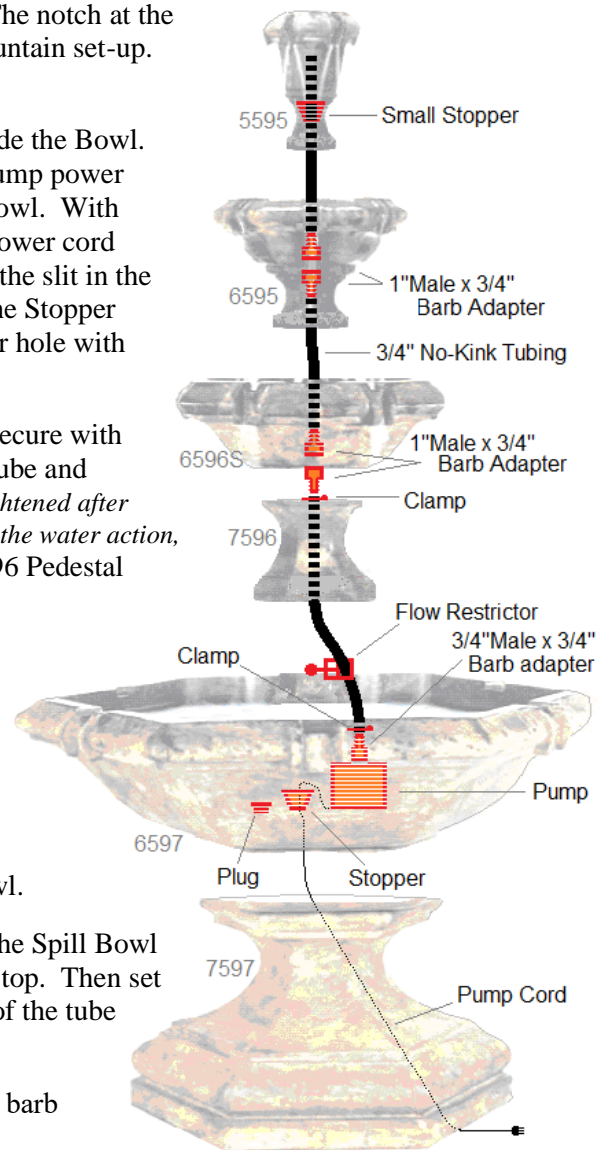

- 9) Slip the 5595 Finial down over the short tube until it rests on the Tier/Pedestal. Reach into the top of the Finial Bowl, open the slit in the remaining Small Stopper, and fit the stopper around the tube as close to the floor of the Finial Bowl as you can. Close the stopper around the tube and tuck the stopper down into the hole in the bowl. Then fill all bowls with water. Read your pump instructions. Turn on the pump. If it does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

## IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

## Online Resources

Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
Contact : [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Csd

2/22