


SETTING UP THE 5623F2

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) At least three strong people are needed to set up this fountain. Place the 6623 Bowl on your prepared site with the notch on the bottom edge for the power cord exit facing toward your power supply. Set the 5623 Millstone next to the bowl – or if you place a cushioning material in between, you can temporarily lean it against the bowl.

2) Slip the Ring Light power cord into the small off-center hole atop the 5623 Millstone, pulling the cord all the way through. Rest the Ring Light itself in the center hole. (*Open the slit in the small rubber stopper. Place it around the light's power cord near the top of the Millstone, close the stopper, and press it down into the hole.*)

3) Place the water pump in the center of the 6623 Basin. Insert both the light and pump power cords down through the hole in the floor of the basin and pull them out from underneath, toward your power supply. At floor level, open the slits in the stopper and place each power cord in the groove sized for it. Then close the stopper slits and press the small end of the stopper into the hole to make the bowl water tight. It is good to leave about 1/8" of the stopper above the hole level for easy gripping if you want to remove it later.

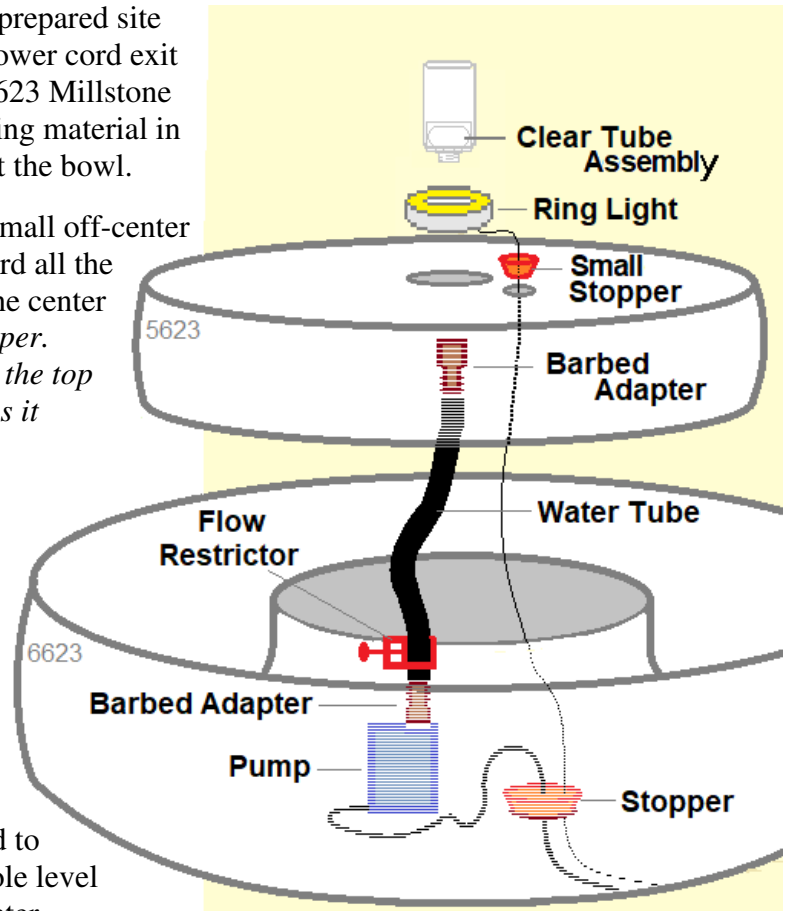

4) Insert the two barbed adapters as shown, one underneath the Millstone and the other into the top of the pump. Slip the Flow Restrictor clamp onto the middle of the water tube and tighten it just enough to hold it in place. (*It can be tightened more later if you want to reduce the water flow.*)

5) Push the water tube onto the barb of the pump adapter. With plenty of help, lift the millstone over the bowl and push the open end of the water tube onto the barb under the millstone before gently setting the millstone down on the center of the bowl.

6) Insert the short, Clear Tube assembly into the top, middle of the millstone, through the ring light. Fill the bowl with water. Read pump and light instructions. Turn on the power. If the pump does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start. Csd

5/2023

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.