
Lunar Flow Fountain (5627F2)

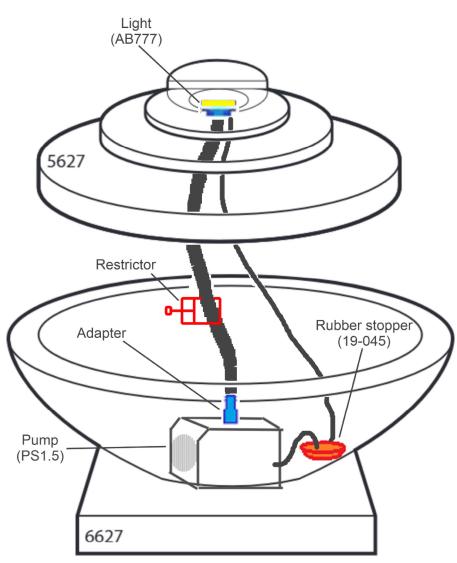

- 1) Place pump in the 6627 basin. Run the pump cable through the hole in the bottom of the 6627, out and under the fountain. Screw the included adapter onto the top of the pump.
- 2) Place the light into the recess within the top of the 5627. Run the light cable down through the hole and into the 6627 basin. Run the cable through the hole in the bottom of the 6627, and out under the fountain.
- 3) Press the included tubing onto the barbed adapter on the bottom of the light. Feed the other end of the tubing down into the fountain basin. Slide the restrictor over the tubing. Press the other end of the tubing onto the pump adapter. 4) In the basin, peel the rubber stopper open and wrap it around the pump and light cables passing through the hole in the basin. Each cable has a respective channel in the stopper for their respective sizes. Ensure each cable is seated well within its channel, straight up and down with no gaps in the stopper. Press the stopper into place within the hole, so that no more than 1/4" of the stopper is left protruding the above concrete.

Questions? Email ProductSupport@HenriStudio.com

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

IMPORTANT - WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.