


SETTING UP THE 5637F & 5637F4

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

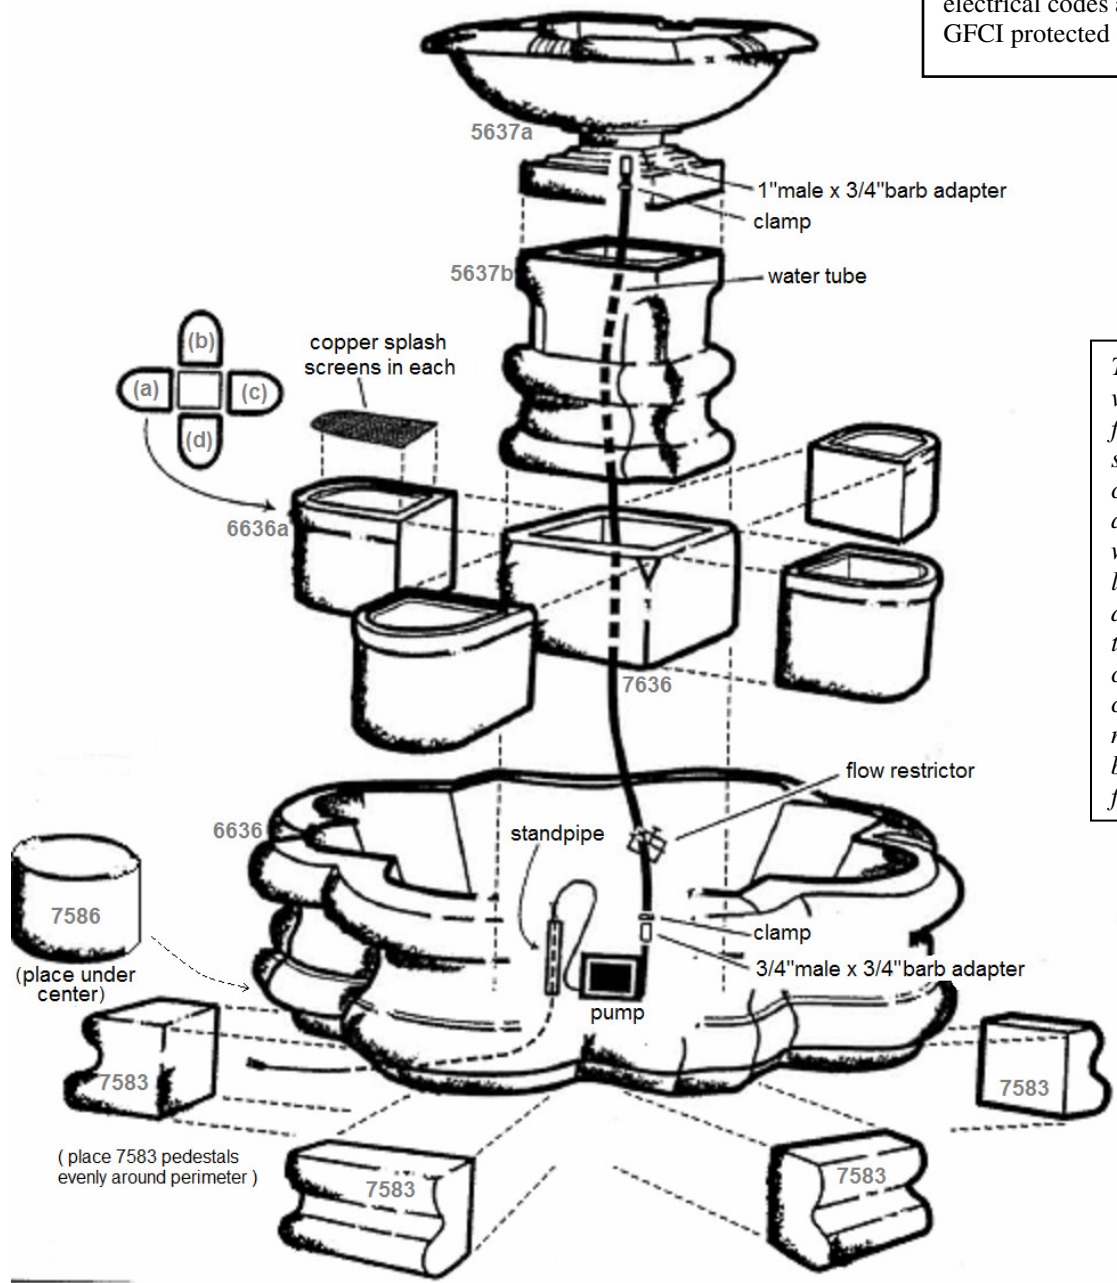

The 5637F4 version of this fountain has the same water connection system as the original which is shown at left. However, it does not include the four 6636a-d catch baskets with copper screens nor the five bottom pedestal feet.

** Remember to read your pump instructions before turning pump on. If the fountain is full of water and the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

Csd

4/19

Online Resources
 Products: www.henristudio.com/products
 FAQs: www.henristudio.com/faq
 Warranty: www.henristudio.com/warranty
 Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE
 Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:
 * Disconnect power to pumps and lights.
 * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
 * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
 * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.