

SETTING UP THE 5649F

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Place 7651 Pedestal on your prepared sight and make sure it sits level.

2) Using teflon tape (not included) to ensure a water tight fit, thread the **pvc stand pipe** tightly into the 6649S bowl. Then push the **flexible stand pipe** over the pvc pipe and secure with the **large clamp**. Set the bowl on the 7651 pedestal.

3) Place the **pump** in the bowl next to the standpipe. Drop the plug and power cord down through the stand pipe and – with help tipping the bowl and pedestal - pull out from under the pedestal for later connection.


4) Thread the **larger barbed adapter** into the pump exhaust. Attach the tube to the adapter and secure with the **smaller clamp**. Install the **flow restrictor** on the tube about 6” from the pump, tightening just enough to keep it in place.

5) As you place the 7647 Pedestal in the bowl, push the top end of the tube up through the pedestal, then set the pedestal all the way down.

6) Set the 6648S Bowl on top of the 7647 pedestal, again pushing the tube up and through as you lower the bowl. Open the slit in the **stopper** and place it around the water tube just above the floor level of the bowl. Then close the stopper around the tube and press the stopper down into the hole in the Bowl floor. (It is good to leave the top of the stopper about 1/8” above the surface for later removal.) Check to make sure this bowl is level.

7) Place the 7648 Pedestal in the 6648S bowl, again passing the tubing up through the middle. Insert the **smaller barbed adapter** under the 5648 Finial/Bowl unit. As you hold this unit over the 7648 pedestal, attach the tube to the barb. Set the unit down on the pedestal.

8) Fill all bowls with water. Read pump instructions. Turn on the pump. If it does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start. Tighten flow restrictor if you want less water movement.

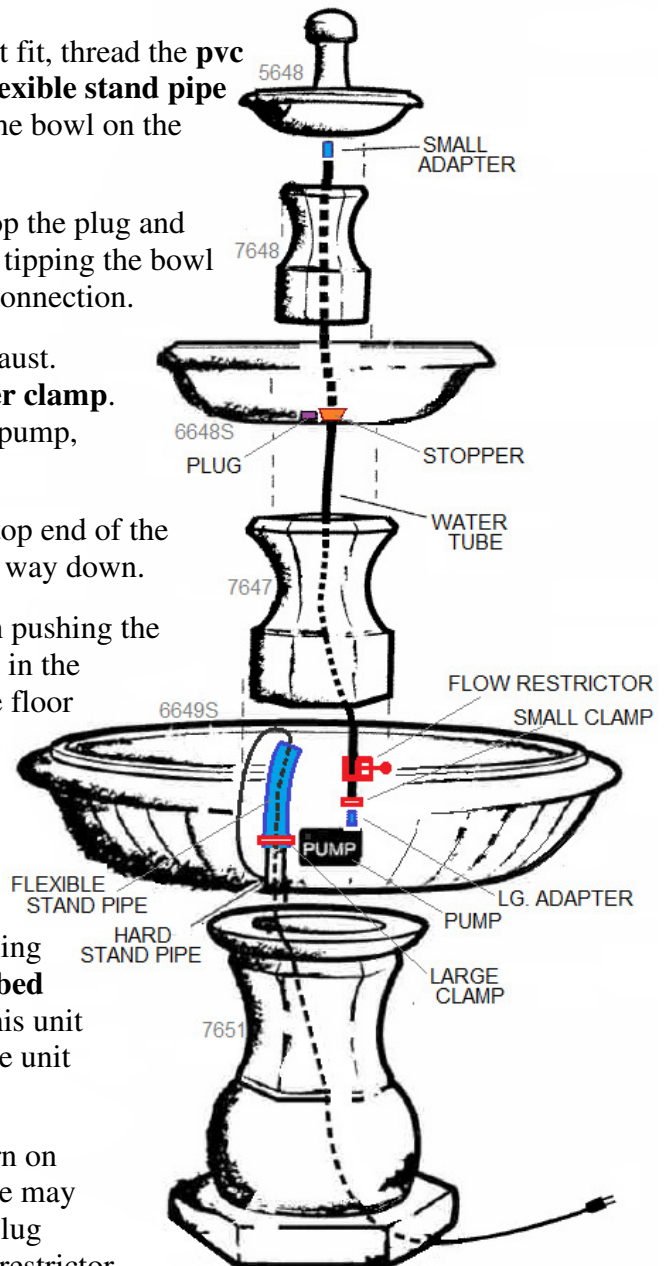

Csd 6/2023

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.