


SET UP INSTRUCTION for 5701F

1) Prepare a suitable location for your new fountain, with a firm and level surface.

2) Always follow your local electrical codes. Make sure to connect to a safe GFCI circuit.

3) Place the fountain's basin unit on its finished location. Notice that one side of the basin bottom has a groove to allow power cords out. Face that side closest to your power source.

4) Set the pump in the basin unit. Slip its power cord down through the center hole and pull out the bottom so that it exits under the groove mentioned earlier. Place the rubber stopper around the power cord and press into the center hole as shown.

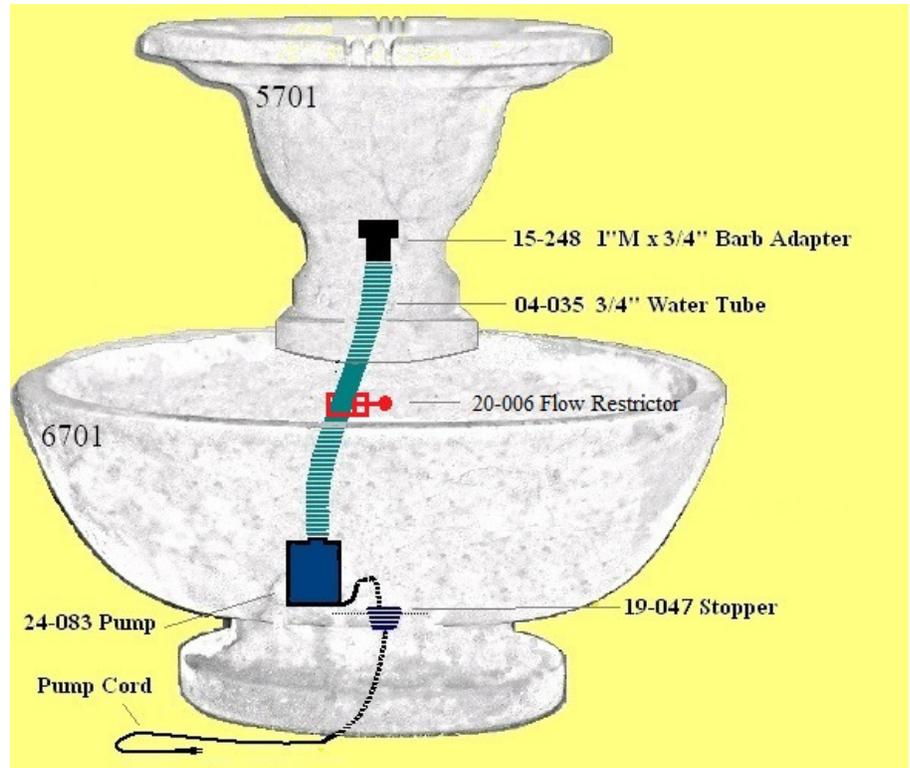

5) Thread the 15-248 1" male x 3/4" barb adapter into the underside of the 5701 top unit.

6) Thread the 15-245 1/2" male x 3/4" barb adapter into the top of the pump. Push or twist the water tube onto this exhaust adapter on top of the pump. Place the Flow Restrictor in the middle of the tube and tighten just enough to stay in place. (This can be tightened later if you want to turn down the water flow somewhat.) With the help of a second person, lower the 5701 into the center of the basin unit, pushing the remaining open tube end onto the barbed adapter up inside the 5701.

7) Fill the bowl unit with water to about 1" from the top.

8) Read your pump instructions. Then, plug the pump in to enjoy your fountain. Two shims are provided in case you want to adjust the level of fountain top piece. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

4/19

3/10/17

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.