

# SETTING UP THE 5705F8

Make sure to place your fountain on a firm area which will not settle. Follow local electrical codes and use a 110V GFCI protected outlet.

1) Prepare a suitable location for your new fountain. With the help of others, set the 6289 Pool on your prepared site. Place the pump in the center of the pool and slip its power cord through the middle opening, pulling it out from underneath toward your power source. Then seal the bowl by opening the slit in the Stopper with the small hole and place the power cord in the stopper's hole. Close the stopper and press into place in the opening in the center of the pool.


2) Insert the Barbed Adapter into the top of the pump, place a long water tube on the adapter barb and secure with the screw clamp. Install one of the Flow Restrictors on the tube just above the pump. Set 7709 Base down over pump. Lay down a strip of caulk tape on top of the base, then set the 6708 Bowl on the base, pulling the tube up and through as you lower the bowl. (The caulk tape will help you stabilize and level the pieces.) Each time you add a stone piece you will now want to use caulk tape, pull the water tube up through the middle, and also check to make sure the pieces are level.

3) Open a large-hole Stopper, place around the tube, and press into the center hole in the bowl. Push one end of the Tee into the tube. Push the short tube onto the middle leg of the tee. Place a Flow Restrictor onto the middle of the short tube and tighten enough to keep it there. Push another longer tube over the open end of tee.

4) Set the 7707 Base in the 6708 bowl and then set the 6706 Bowl on that base, lining with caulk tape both times. Pull the tube up through the center and install the remaining stopper between the tube and the hole as before.

5) Still with caulk tape between pieces, set the 7705 base on next and then the 6705 bowl. Use a little of the caulk tape to ring the water tube where it comes up out of the hole in the floor of the 6705 Bowl. Then as you set the 5705 finial piece on top, slide the tube all the way up inside the finial.

6). Check to see if all levels are lined up as you desire. Shims are included to make level adjustments. Then, read your pump instructions, fill the bowls with water, and plug the pump in. Once the water starts to flow, it is the best time to make any final leveling adjustments, from the bottom up. (If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.)

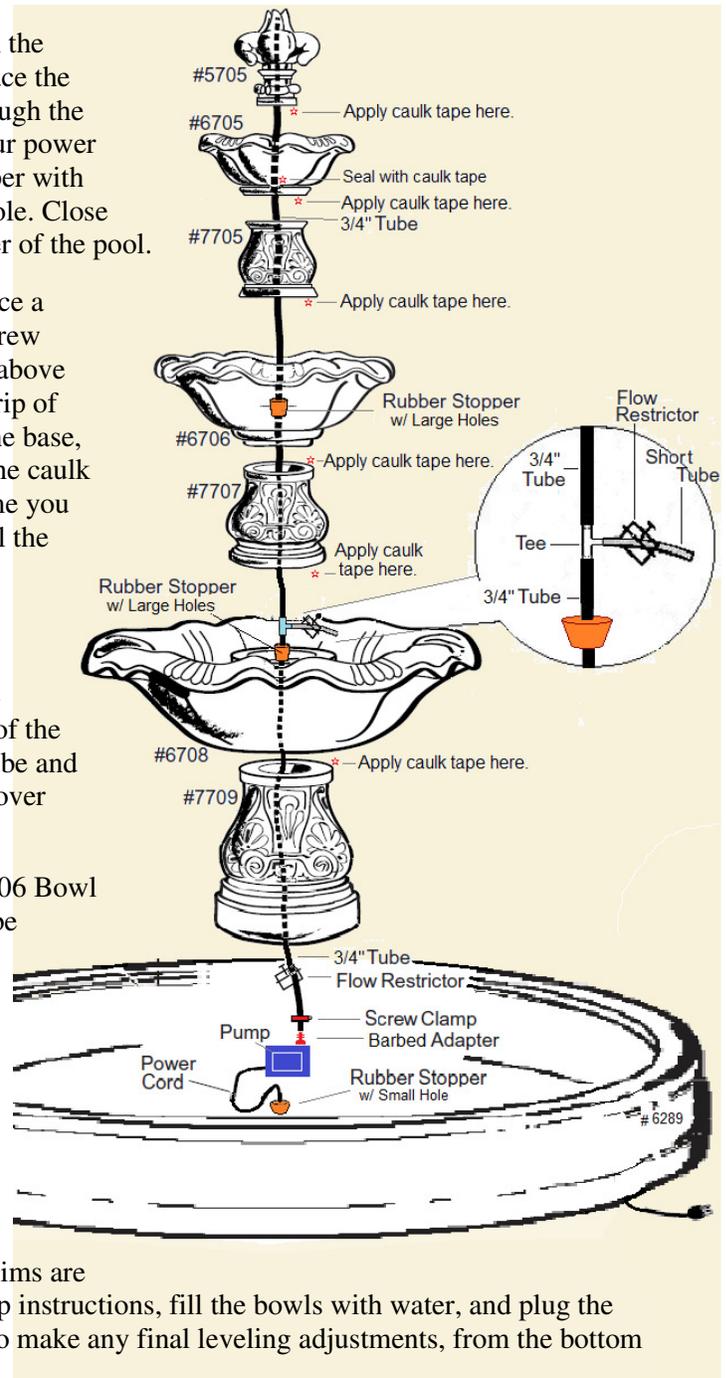

Csd

9/21

**Online Resources**

Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
 FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
 Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
 Contact : [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

**IMPORTANT – WINTER CARE**

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.