
SETTING UP THE 5720F7

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

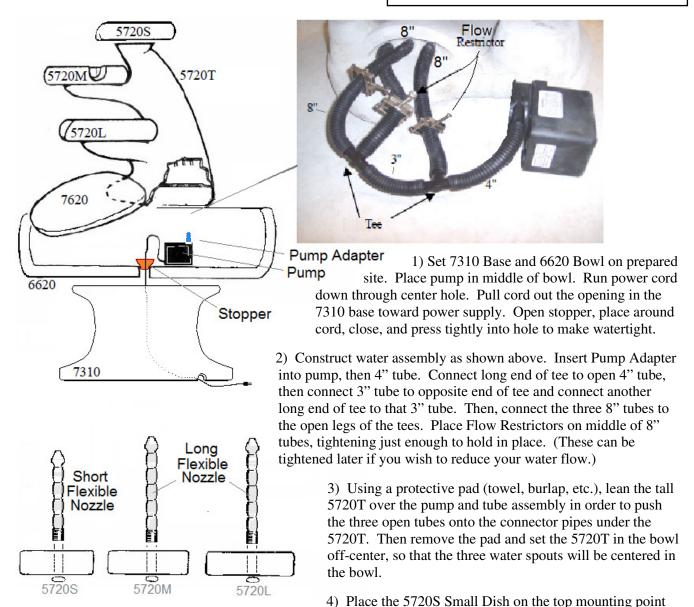

of the 5720T. Thread the Short Flexible Nozzle down through the hole into the coupling in the 5720T. Repeat this process for the 5720M Medium Dish and the 5720L Large Dish, using the Long Flexible Nozzles. Turn the top small dish to pour into the medium dish, which will pour into the large dish. Finally, hide your pump and water assembly by placing the 7620 Pump Cover over it.

5) Fill with water. Read your pump instruction. Then turn on the pump. If it does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and

it should start. Csd 10/19

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT - WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.