

# SETTING UP THE 5774F4

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Set your 6635 Basin on your prepared fountain location. Place the light and pump in the basin and run their power Cords down through the hole in the floor. Open the slit in the Stopper and place the power cords within the molded groove – pump in the larger groove – and close back up. The stopper should be close to the pump and about two feet from the light. Then, press the stopper into the hole to make the basin water tight. Leave about 1/8” of the stopper above the floor to help remove it in the future.

2) Thread the larger adapter into the pump and push the short Flexible Tube onto it. Slip a Clamp over the tube and tighten it where the tube overlaps the pump’s adapter.


3) Slip another Clamp over the same short tube. Push a side end of a Tee into the open end of the short tube, then tighten the clamp over the intersection of the tee and the piece of tube.

4) Push the little Clear Tube onto the opposite end of the tee. Next, push a side end of the other Tee into the open side of the clear tube, just as shown in the drawing.

5) Push a flexible tube on remaining open legs of either tee. Mount Flow Restrictors on these three tubes by tightening them just enough to hold them in place. Any of them can be tightened later if you wish to adjust the amount of water flow.

6) Thread a smaller adapter underneath each of the three stone Clef ornaments. Slowly lower the tall 5774C onto the inside ledge within the inside back of the basin, connecting the tube from the top of the tee assembly (as shown) to the adapter’s barbs as you lower it. Set the light on the round ridge in the inside front as shown. Then gently place the other two Clef ornaments onto the inside ledge (in front) as shown. (*Arranging the tees and tubes as shown is crucial to achieving a balanced flow from all 3 Clef ornaments.*)

7) Fill the basin with water. Read pump and light instructions. Turn on the pump and plug in the light transformer. If the pump does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start. Csd 9/2023

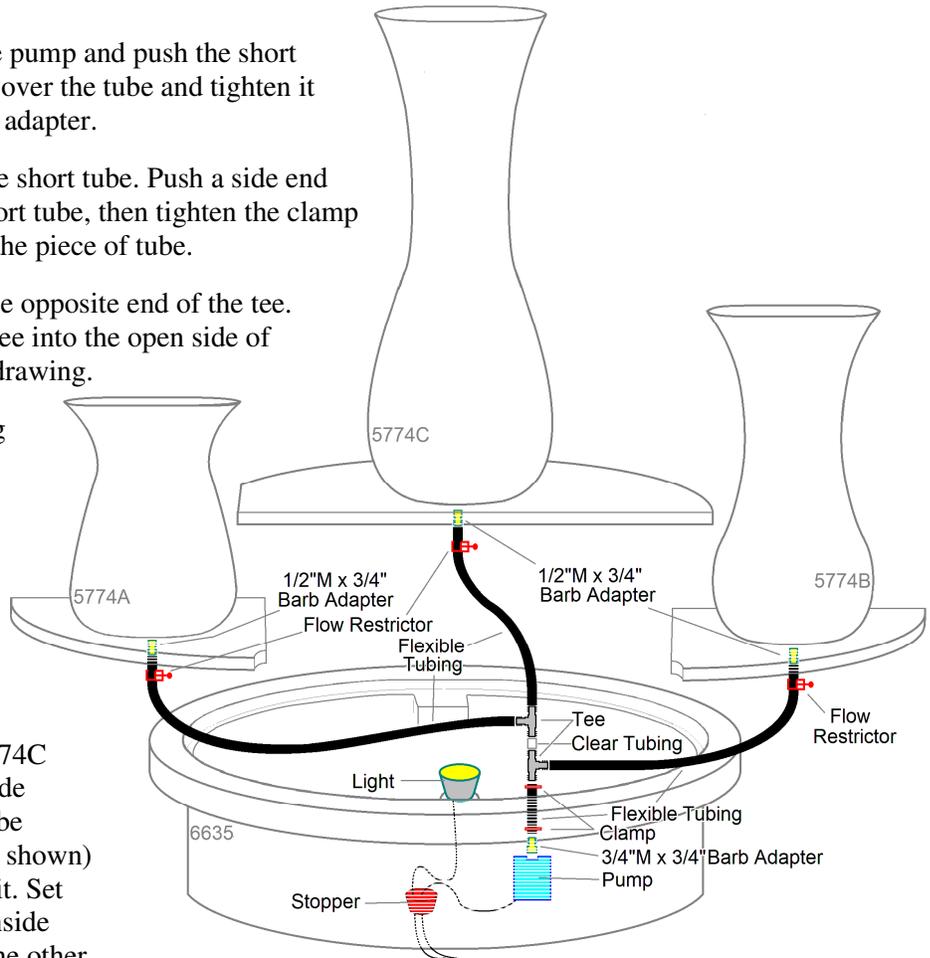

**Online Resources**  
Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
Contact : [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

## IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.