

5839F3 SET UP INSTRUCTIONS

1) Prepare a suitable location for your new fountain. The fountain needs the support of a firm and level surface.

2) Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.

3) Securely slip one end of the tubing over the barbed attachment under the AB870 light. Set the 5839H down. Insert the tubing and light power cord together down through the top hole of the 5839H, pulling them out through the access hole under the 5839H. The AB870 light should fit snug in the top hole of the 5839H.

4) Place the restrictor about 5" from the lower end of the tube, tightening just enough to hold it in place there. (Once operating the fountain, you can tighten the restrictor to lessen your water flow if desired.)

5) Thread the barbed adapter into the top of the pump.

6) Push the pump adapter barb end into the open end of the tubing.

7) Using the two-hole rubber stopper, place the stopper on the pump cord about 10" from the pump body. The larger end of the stopper should be closest to the pump. Then, insert the power cord from the light into the stopper's other hole. The length of the light cord from the light should be about 6" longer than the water tube.

8) Set the 7839F Base on the area you prepared for the fountain. Make sure the access opening underneath is on the side nearest your electrical connection.

9) Set the 6839H Basin on the 7839F Base.


10) Place the 5839H Finial section in the middle of the 6839H Basin. As one person lowers the Finial, another can guide the attached components underneath. First, the power cords can be inserted down through the center hole of the Basin, then the rubber stopper can be pressed into place to seal up the hole, and the rest can be guided to fit inside of the Finial. The access door in the Finial should be angled away from your prime viewing point.

11) Reach into the access opening of the Base to collect the power cords and pull them out through the access opening.

12) Fill the bowl unit with water to about 1" from the top.

13) Read your pump and light instructions. Then, connect the light power cord to the transformer provided and plug in the transformer and pump to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

14) Save this instruction and make sure to winterize according to details below.

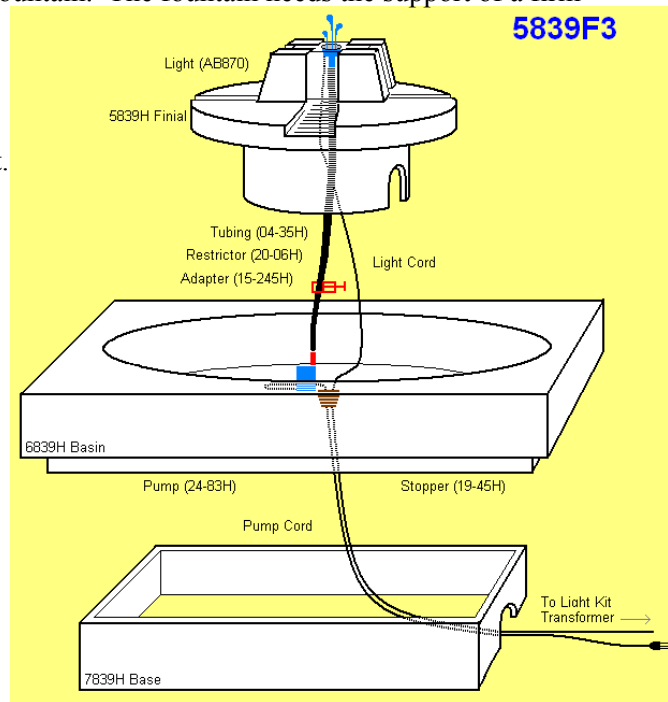

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.