

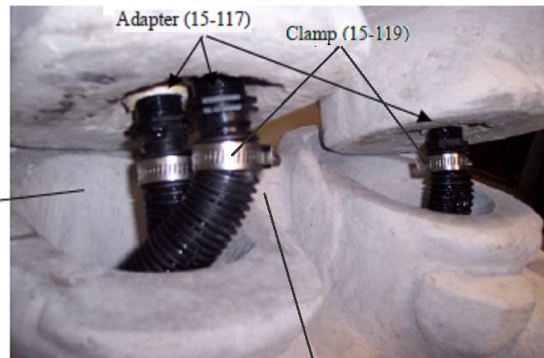


SETTING UP THE 5887F4


Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

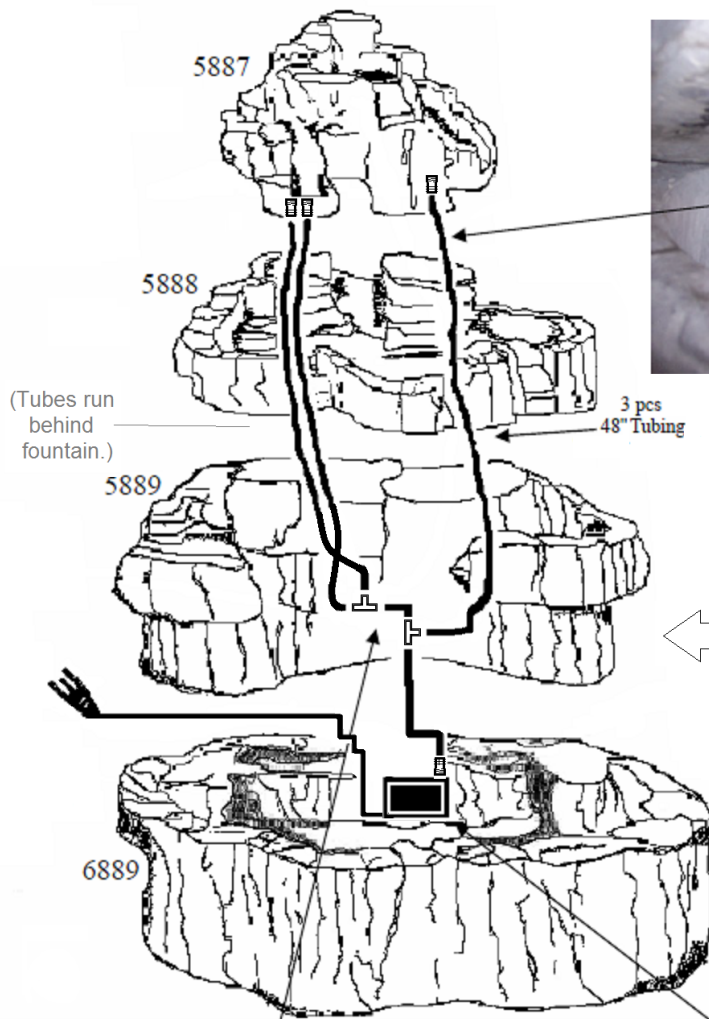

Test and confirm that the middle coupling (above) leads to the top water flow hole by using a tube and blowing through it. You will want the straightest line of tubing to connect to this coupling.

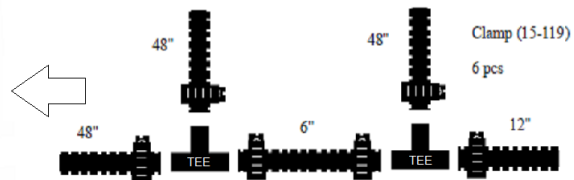

Use 6 clamps to fasten these parts together. The 12" tube should be attached to the pump. Then insert the 3 adapters in the top #5887 piece and clamp the 48" tubes to the adapters. For maximum performance make sure to align the tubes as shown.

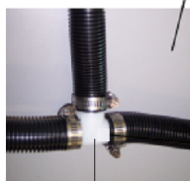

Tee (15-118)

Place pump in back of basin. Insert adapter in pump. Clamp the 12" tube to adapter. Drape both the power cord and tube out the back.

Tubing 12" (04-030)
Clamp (15-119)
Adapter (15-117)
Pump

To finish, fill basin with water. Read pump instructions. Turn on the pump. If it does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

Csd 5/2020

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact : www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.