


Wall of Lilies 5902F1

1. Place the pump and lights into the basin (lights shown outside the basin in diagram only for illustration). Run the power cables for the pump and lights out through the hole in the bottom of the basin. Peel open the rubber stopper and lay the power cables within their respective channels in the stopper. Press the stopper firmly into the hole to create a tight seal.

2. Connect plumbing to pump exactly as illustrated in the diagram. First, attach the longest length of tubing to the top of the pump, the other to a "T" adapter as shown. Connect the "straight" side of each "T" adapter to the next. When done, each open end of the "T" adapters should have another length of tubing connected to it. Slide the restrictors over each of these lengths of tubing. Screw the remaining 6 adapters onto the open holes in the vertical concrete wall. Press the remaining open ends of tubing onto the to the concrete-side adapters screwed into the wall.

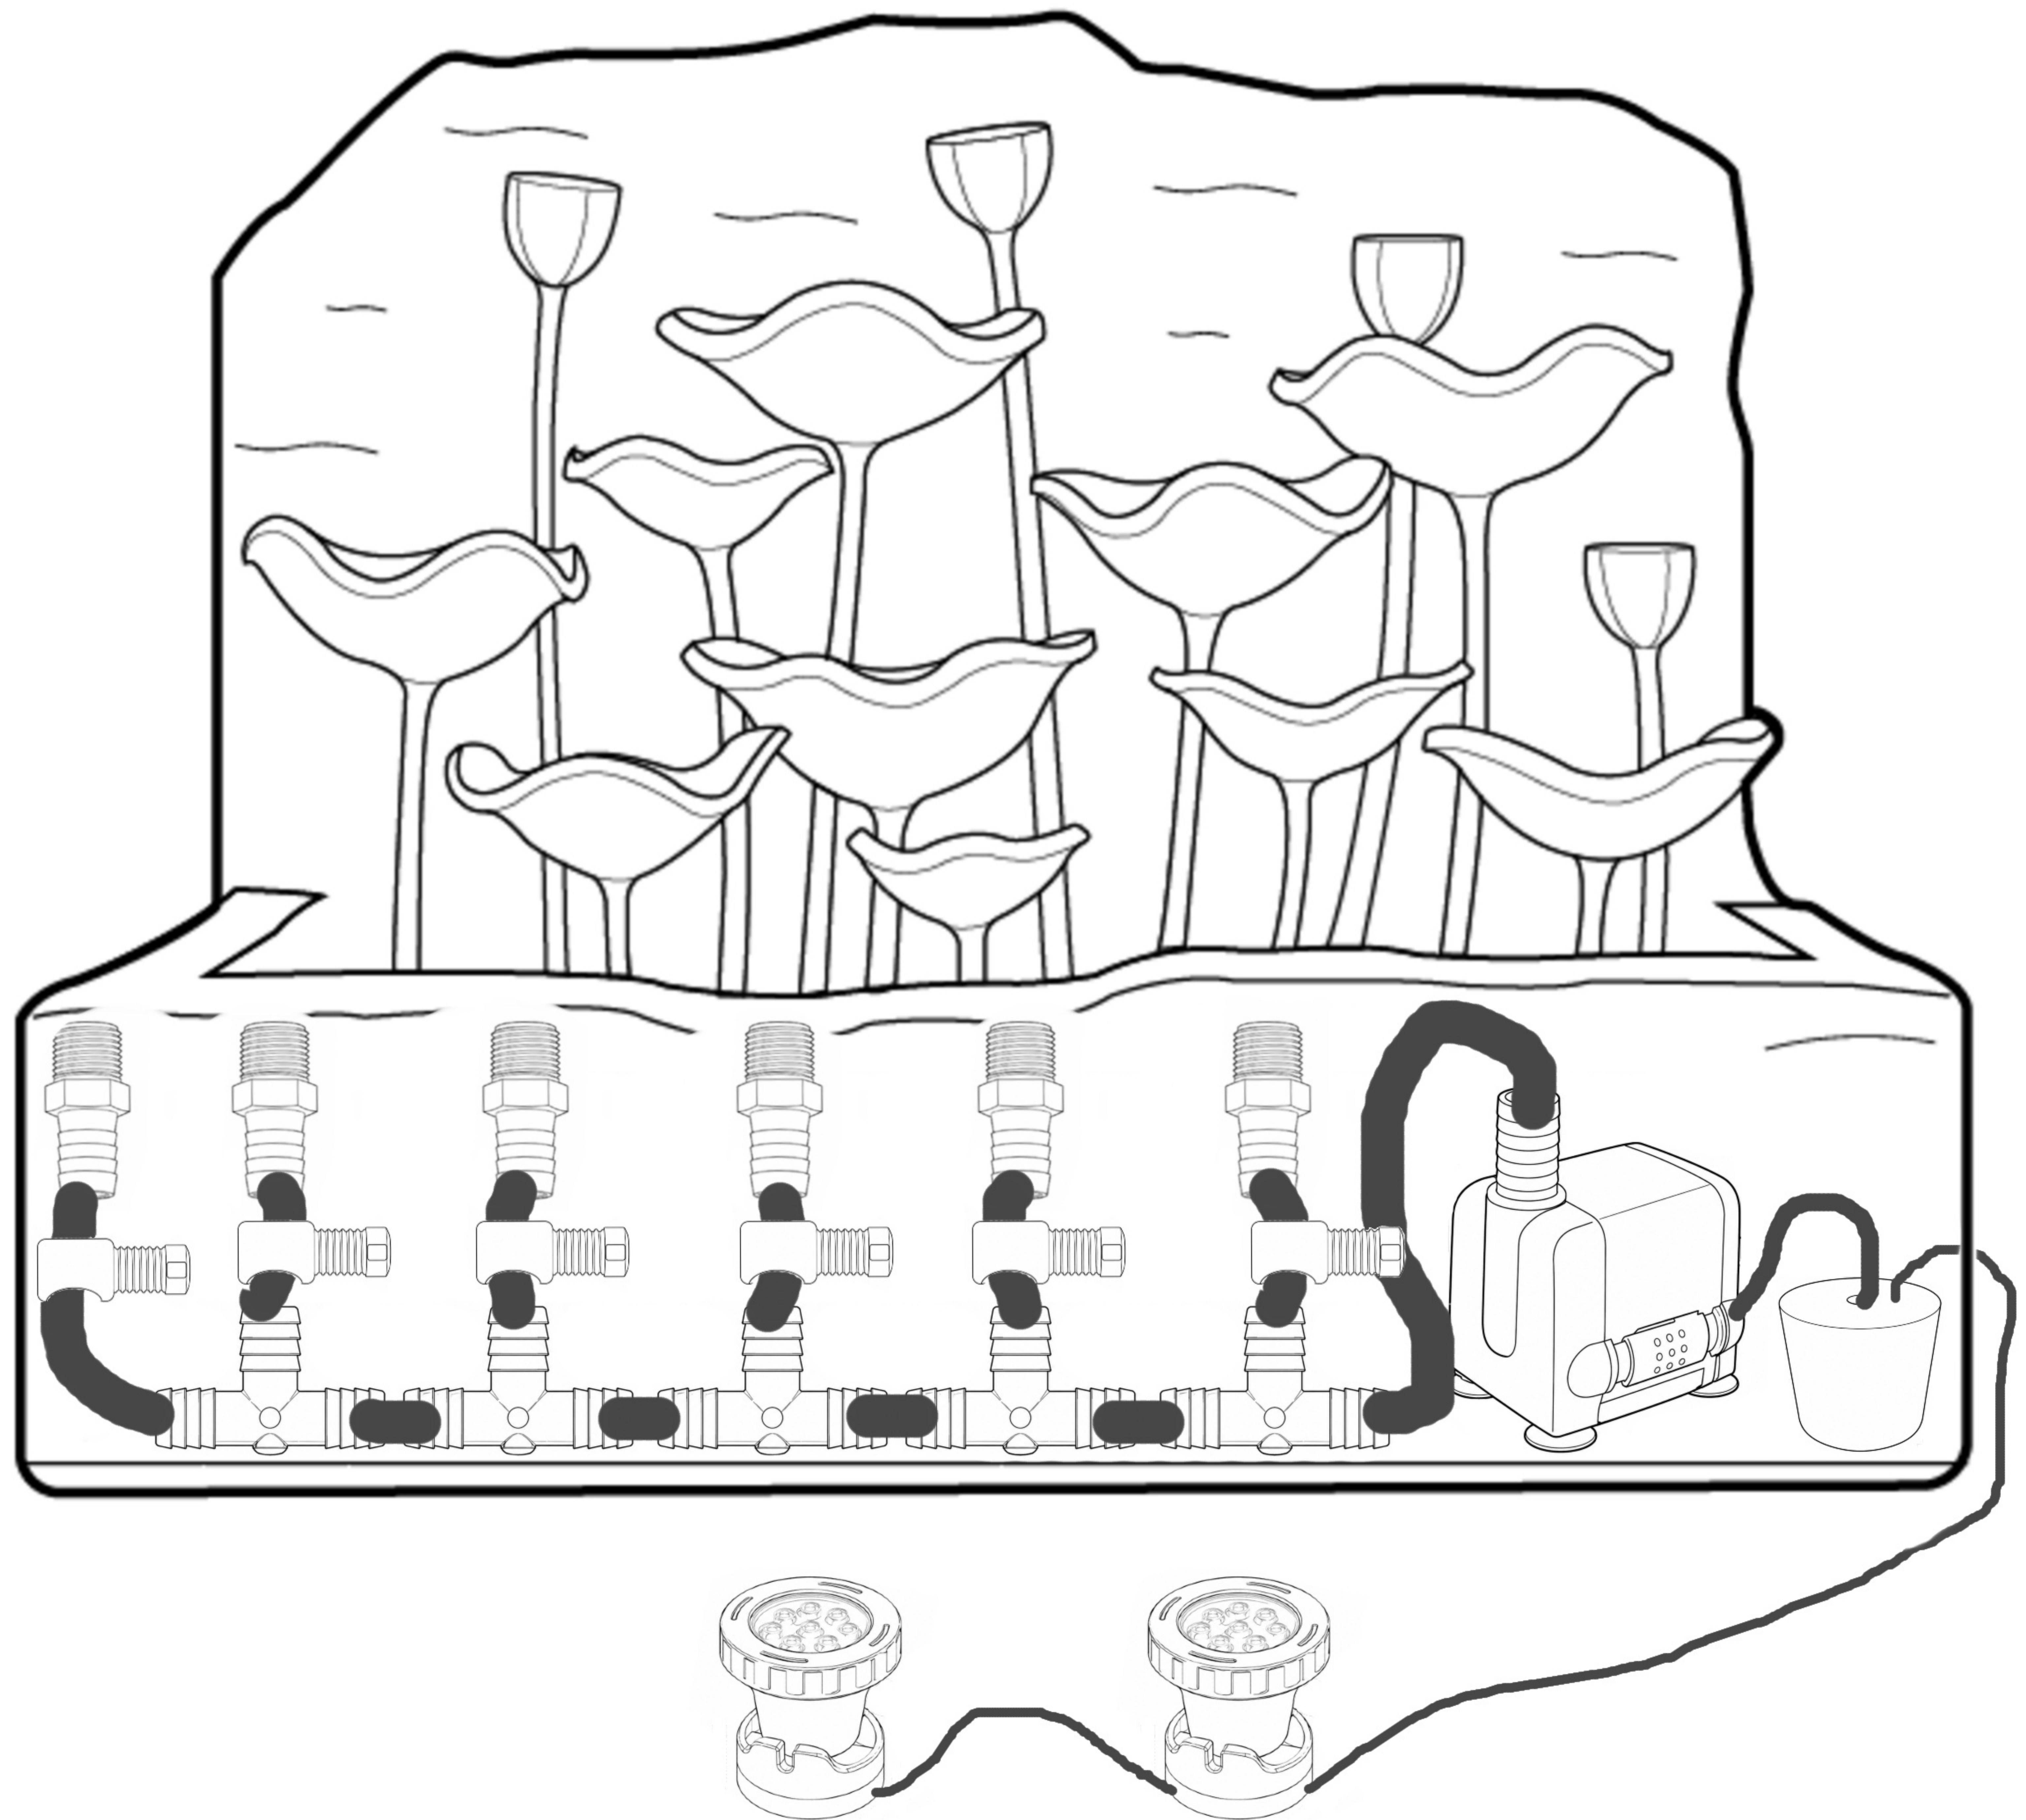

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

Questions? Email
ProductSupport@HenriStudio.com

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.