
Monet Fountain (4952F2)

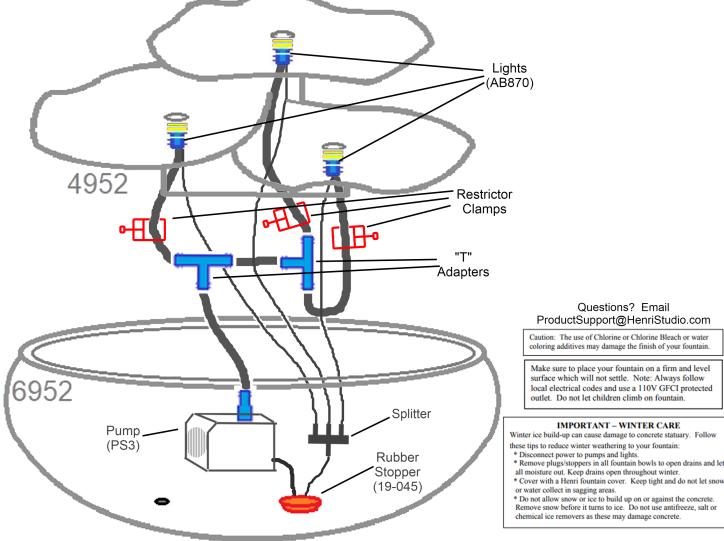

- 1) Insert lights into their respective areas in the 4952. Run the light cables down into the basin. Connect the light cables to the splitter. Connect the extension cable to the splitter. Run the extension cable through the hole in the bottom of the basin, leading outside the basin.
- 2) Place the pump in the basin. Run the pump cable through the hole in the bottom of the basin, leading outside the basin.
- 3) Install the rubber stopper in the hole in the bottom of the basin. Peel it open to place around the pump and light cable. Press down far enough that no more than 1/4" of the stopper is protruding above the concrete.
- 4) Install the plumbing exactly as outlined in the diagram, paying special attention to the orientation of the "T" adapters. Ensure to place the restrictor clamps over their respective hoses before pressing the hoses onto the adapters.
- 5) Fill and run the fountain. Use the restrictor clamps to reduce/balance flow as necessary.