

SETTING UP THE 5690F5

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Place the Fountain Pedestal in the center of your prepared site. Turn the “mouse hole” opening at the bottom toward your power source.

2) Set the Bowl on the Pedestal. Place pump in the bowl and push its power cord down the center hole. With help, tip the Bowl and Pedestal together, grasp the power cord from under the pedestal and pull it out toward your power source. Then set the Bowl and Pedestal up straight again.

3) At the hole in the center of the Bowl, open the slit in the Rubber Stopper. Place the Stopper around the power cord, close the Stopper around the cord and press the Stopper firmly into the hole. Leave about 1/8” above the floor of the Bowl for ease removing it in the future.


4) Connect the Pump Adapter to the Pump. Push the Water Tube onto the Pump Adapter.

5) Lower the Pump Cover into the Bowl, making sure to keep the Pump and Tube inside the Cover.

6) Install the Flow Restrictor Clamp about 3” from the top of the Water Tube. Lower the Statue onto the Pump Cover, pushing the Water Tube onto the pipe underneath the Statue as you do.

7) Thread the brass Umbrella Rod into the threaded hole in front of the Golfer. The end of the Rod with less thread goes into the statue. The end with more thread goes on top. Then thread the Washer far enough onto the top to leave space for the other parts – Umbrella next, then Bushing, and finally the Nozzle on top.

8) Fill the Bowl with water. Read pump instructions. Turn on the pump. If it does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start. Csd 4/2024

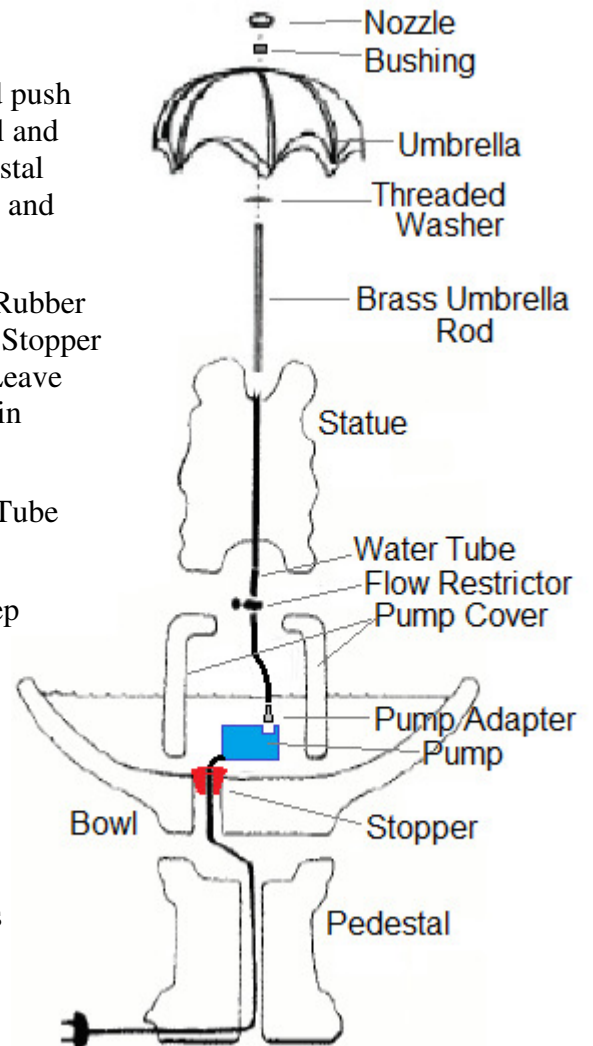

Online Resources
Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: Using Chlorine or Chlorine Bleach or water coloring additives or salt may damage the finish of your fountain.

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

