

SETTING UP THE ...5562F6

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

1) Prepare a suitable location for your new fountain.

2) Place the 6289 Basin in the center of your site with the cord notch facing away from your primary viewing angle and toward your power outlet.

3) Set the pump in the basin and thread the power cord through the hole in the basin floor. Open the slit in the rubber stopper and place the cord inside the groove in the stopper, then close and push the stopper firmly into the hole in the floor.

4) Connect one of the 3/4" Male Thread x 3/4" Barb Adapters to the pump. Push the longer 3/4" Tube onto the pump adapter. Slip the Flow Restrictor onto the tube and tighten it just enough to let it stay in position about 10" above the pump. (It can be further tightened later if you wish to lower the water velocity.) Lower the 7567 Pedestal in the Basin, over the pump and pull the tube and the through the pedestal as you set it down.


5) Thread the two 1" Male x 3/4" Barb Adapters into the top and bottom holes of the 6563P Bowl. Then, with needed help, lower the Bowl onto the 7567 Pedestal, pushing the open end of the tube onto the lower adapter's barb before resting the bowl on the pedestal.

6) Push one end of the other 3/4" tube onto the top adapter in the bowl. Lower the 7562 Pedestal into the center of the bowl, pulling the open end of the tube up and through the pedestal.

7) Install the remaining 3/4" Male x 3/4" Barb Adapter into the bottom of the 6562 Bowl. Lower the Bowl onto the 7562 Pedestal, pushing the open end of the tube onto it before setting it all the way down.

8) Install the smaller 3/4" Male x 1/2" Barb in the top opening of the 6562 Bowl. Push the 1/2" tube onto this barb. Slip the other end of the 1/2" tube up the middle of the 5562 Finial as you lower it onto the 6562 Bowl. Use shims to level bowls as needed.

9) Read your pump and light instructions. Fill the bottom bowl with water. Then plug in the pump to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

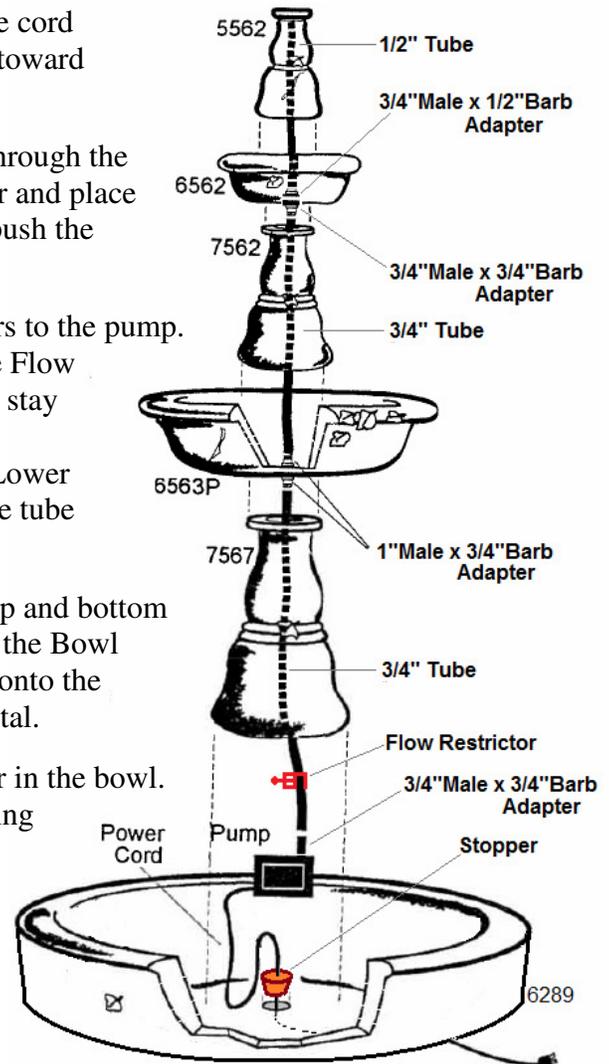

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

7/2019

Online Resources

Products: www.henristudio.com/products
FAQs: www.henristudio.com/faq
Warranty: www.henristudio.com/warranty
Contact: www.henristudio.com/contact-us

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.