

# SETTING UP THE 5849F2

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet.

1) Prepare a suitable location for your new fountain with a firm and level surface. Always follow local electrical codes. Make sure to connect to a safe GFCI circuit.

2) Place the Basin unit in its finished location. Be sure to turn the access hole at the bottom toward your electrical connection.

3) Securely slip one end of the wider tubing over the barbed attachment under the Plume Light. Insert this tube and light power cord together down through the top hole of the Fountain Top. The plume light should fit snug in the center hole of the Top. Push/twist the threaded end of the Barbed Adapter into the other end of the same tube. Then push one end of the smaller tube over the barbed end of the adapter.

4) Place the restrictor in the middle of the smaller tube, tightening just enough to hold it in place there. (*Once operating the fountain, you can tighten the restrictor to lessen your water flow if desired.*)


5) Set the Fountain Top close to the Basin. Put the pump in the Basin. Insert the smaller threaded adapter into the top of the pump. Place the rubber stopper on the pump cord about 10" from the pump body. The larger end of the stopper should be closest to the pump. Then, insert the power cord from the light into the stopper's other hole. The length of the light cord from the light should be at least 6" longer than the water tube.

6) Guide the two power cords down through the basin's center hole. With the help of another person to hold items in place, tip the whole fountain back just enough to reach underneath and pull the loose cords out the access hole. Returning your attention to inside the basin again, make sure the pump is sitting down in the lowest part of the Basin. Press the rubber stopper firmly in place to create a watertight seal, leaving 1/8" of the stopper above the hole.

7) Push the open water tube onto the pump exhaust adapter. Then, let the Top rest in the Basin.

8) Fill the bowl unit with water to about 1" from the top. Read your pump and light instructions. Then, connect the light power cord to the transformer provided and plug in the transformer and pump to enjoy your fountain. If the pump does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start.

9) Save this instruction and make sure to winterize according to details at right. Csd: 2/4/2020

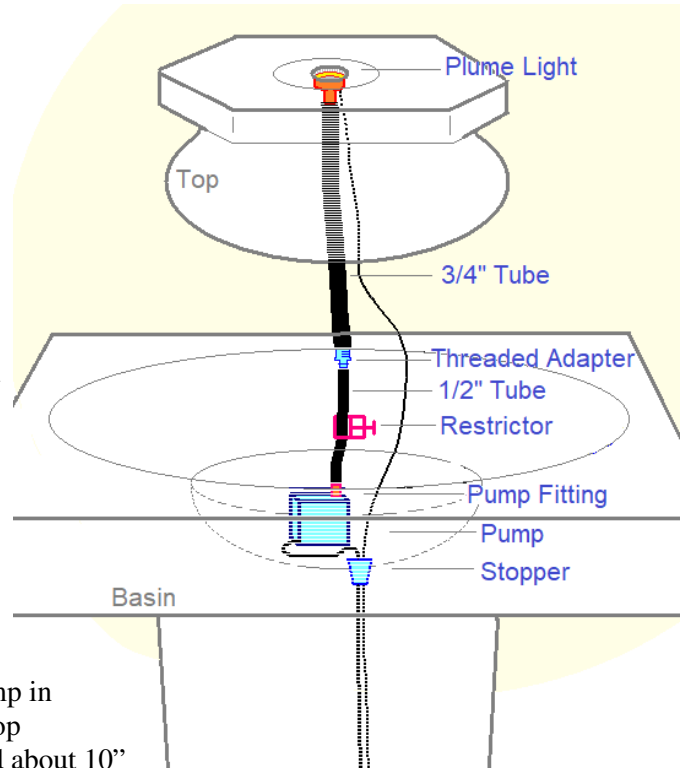

### Online Resources

Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
Contact : [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

### IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.